


Q/QnA Serial Communication Driver

1	System Configuration.....	3
2	Selection of External Device	10
3	Example of Communication Setting	11
4	Setup Items	32
5	Cable Diagram	39
6	Range of Supported Device Address	60
7	Device Code and Address Code	64
8	Error Messages	65

Introduction

This manual describes how to connect the Display and the External Device (target PLC).

In this manual, the connection procedure will be described by following the below sections:

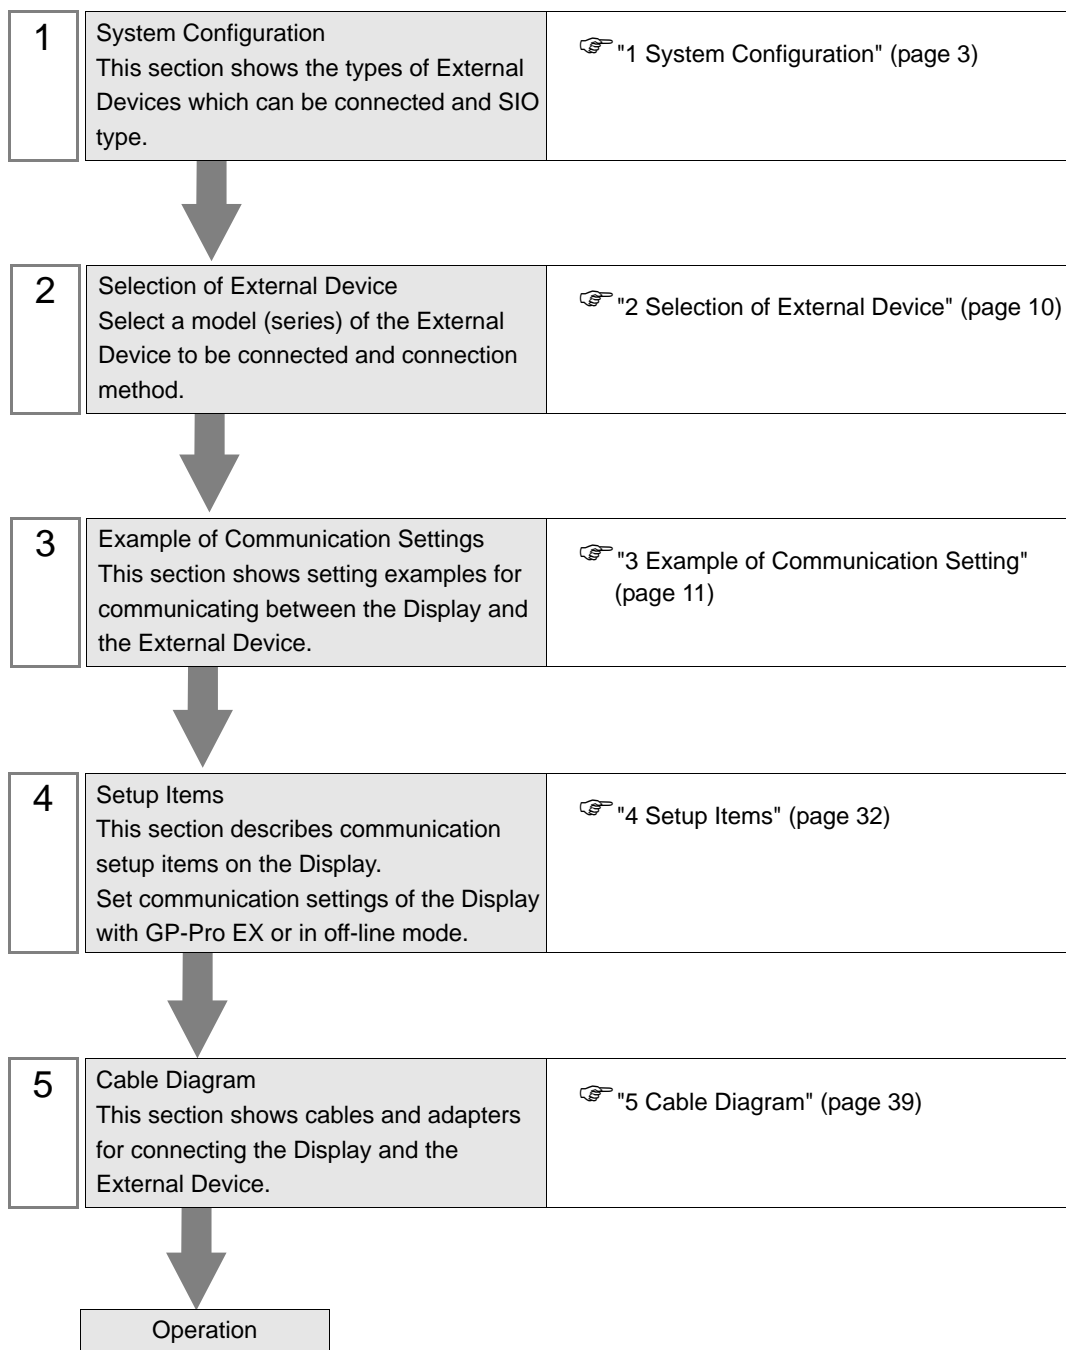

1 System Configuration

The system configuration in the case when the External Device of Mitsubishi Electric Corp. and the Display are connected is shown.

Series	CPU	Link I/F	SIO Type	Example of Communication Settings	Cable Diagram
MELSEC Q	Q02CPU Q02HCPU Q06HCPU Q12HCPU Q25HCPU Q00JCPU Q00CPU Q01CPU Q02UCPU Q03UDCPU Q04UDHCPU Q06UDHCPU	QJ71C24 QJ71C24-R2 QJ71C24N QJ71C24N-R2	RS232C	Setting Example 3 (page 17)	Cable Diagram 1 (page 39)
	Q00JCPU Q00CPU Q01CPU Q02UCPU Q03UDCPU Q04UDHCPU Q06UDHCPU	QJ71C24 QJ71C24N QJ71C24N-R4	RS422/485 (4wire)	Setting Example 4 (page 20)	Cable Diagram 2 (page 41)
			RS422/485 (4wire) Multilink	Setting Example 6 (page 26)	Cable Diagram 6 (page 55)
	Q00UJCPU Q00UCPU Q01UCPU Q10UDHCPU Q13UDHCPU Q20UDHCPU Q26UDHCPU	QJ71C24N QJ71C24N-R2	RS232C	Setting Example 3 (page 17)	Cable Diagram 1 (page 39)
		QJ71C24N QJ71C24N-R4	RS422/485 (4wire)	Setting Example 4 (page 20)	Cable Diagram 2 (page 41)
			RS422/485 (4wire) Multilink	Setting Example 6 (page 26)	Cable Diagram 6 (page 55)
	Q03UDECPU Q04UDEHCPU Q06UDEHCPU Q10UDEHCPU Q13UDEHCPU Q20UDEHCPU Q26UDEHCPU	QJ71C24N ^{*1} QJ71C24N-R2 ^{*1}	RS232C	Setting Example 3 (page 17)	Cable Diagram 1 (page 39)
		QJ71C24N ^{*1} QJ71C24N-R4 ^{*1}	RS422/485 (4wire)	Setting Example 4 (page 20)	Cable Diagram 2 (page 41)
			RS422/485 (4wire) Multilink	Setting Example 6 (page 26)	Cable Diagram 6 (page 55)
	Q00CPU Q01CPU Q00UJCPU Q00UCPU Q01UCPU Q02UCPU ^{*2}	RS232C connector on CPU	RS232C	Setting Example 5 (page 23)	Cable Diagram 3 (page 47)

continued to next page


Series	CPU	Link I/F	SIO Type	Example of Communication Settings	Cable Diagram
MELSEC QnA	Q2ASCPU Q2ASCPU-S1 Q2ASHCPU Q2ASHCPU-S1	A1SJ71QC24 A1SJ71QC24N A1SJ71QC24-R2 A1SJ71QC24N-R2	RS232C	Setting Example 1 (page 11)	Cable Diagram 1 (page 39)
		A1SJ71QC24 A1SJ71QC24N	RS422/485 (4wire)	Setting Example 2 (page 14)	Cable Diagram 2 (page 41)
			RS422/485 (4wire) Multilink	Setting Example 7 (page 29)	Cable Diagram 6 (page 55)
	Q2ACPU Q2ACPU-S1 Q3ACPU Q4ACPU Q4ARCPU	AJ71QC24 AJ71QC24N AJ71QC24-R2 AJ71QC24N-R2	RS232C	Setting Example 1 (page 11)	Cable Diagram 4 (page 48)
		AJ71QC24 AJ71QC24N	RS422/485 (4wire)	Setting Example 2 (page 14)	Cable Diagram 2 (page 41)
			RS422/485 (4wire) Multilink	Setting Example 7 (page 29)	Cable Diagram 6 (page 55)
		AJ71QC24-R4 AJ71QC24N-R4	RS422/485 (4wire) (when using CH1)	Setting Example 2 (page 14)	Cable Diagram 5 (page 50)
			RS422/485 (4wire) (when using CH2)	Setting Example 2 (page 14)	Cable Diagram 2 (page 41)
			RS422/485 (4wire) (when using CH2) Multilink	Setting Example 7 (page 29)	Cable Diagram 6 (page 55)

*1 The unit whose first 5 digits of the serial No. is less than "10042" cannot be connected with the universal model built-in Ethernet port QCPU.


*2 Available when using the unit whose first 5 digits of the serial No. is "10102" or later, and GX Developer version 8.76E or later.

■ Connection Configuration

- 1:1 Connection

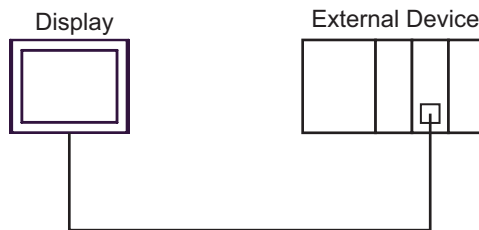


- 1:n Connection

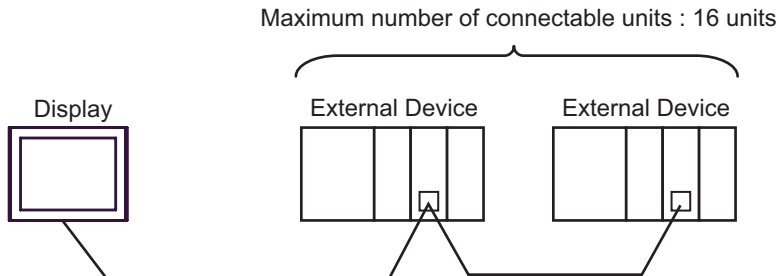

- 1:n Connection (when communicating via network)

You can access other stations via MELSECNET/H, MELSECNET/10, Ethernet or Q Series C24 unit. Note that you can access only the source station when using the RS232C connector on Q00CPU or Q01CPU.

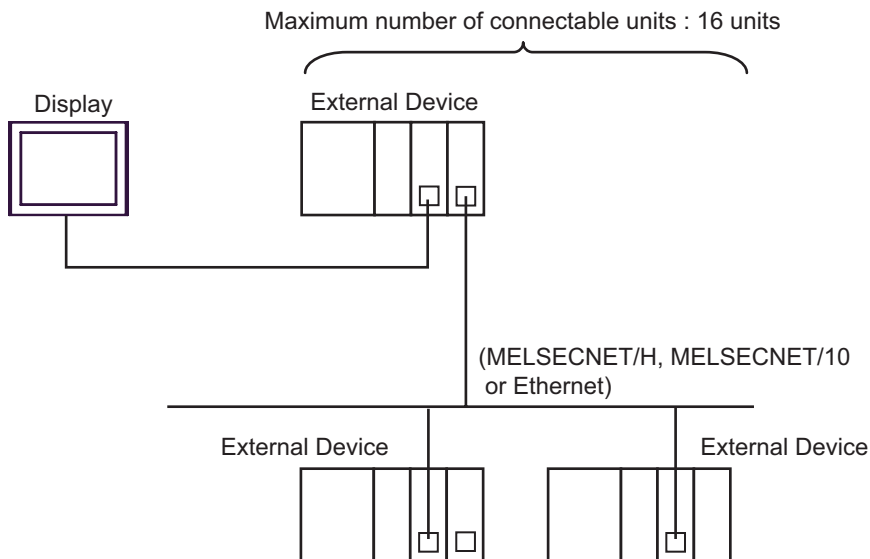


NOTE

- In case of communication via network, please set larger value than the response monitoring time of the relay station for timeout settings.


Setting examples for access beyond the network are shown below. Check the details of the setup items in "Setup Item."

☞ "4 Setup Items" (page 32)

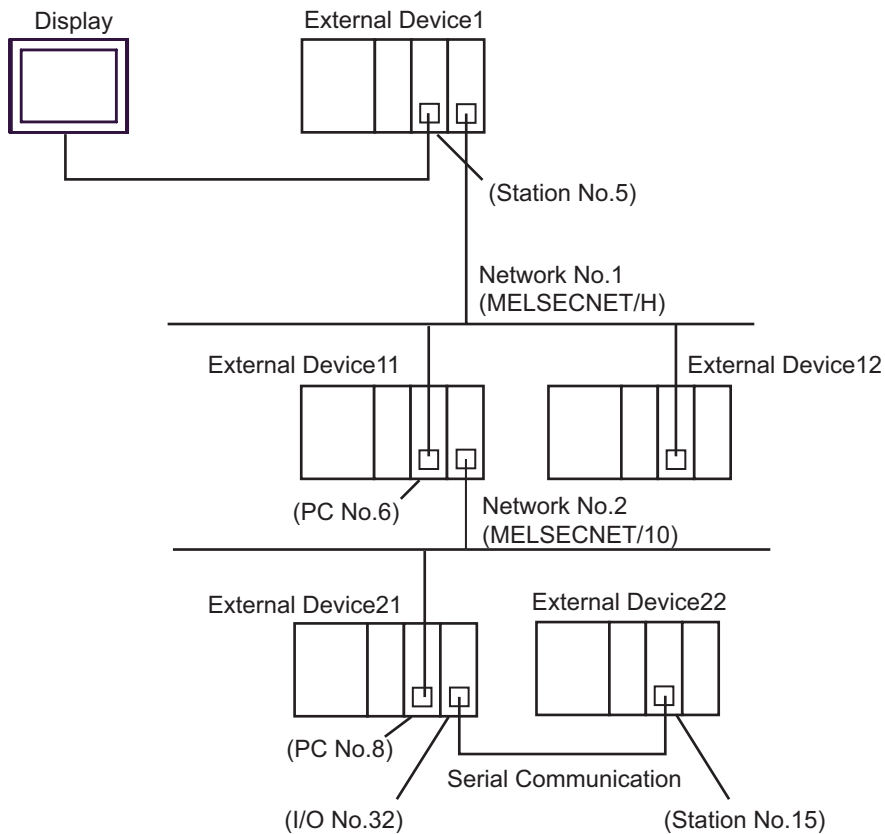


External Device to be Accessed	Port No.	Station No.	Network No.	PC No.	Request destination module I/O No.	Request destination module Station No.
External Device 1	1025	5	0	255	1023	0
External Device 11	1026	5	1	6	1023	0
External Device 22	1027	5	2	8	32	15

- n:1 Connection (Multilink connection)

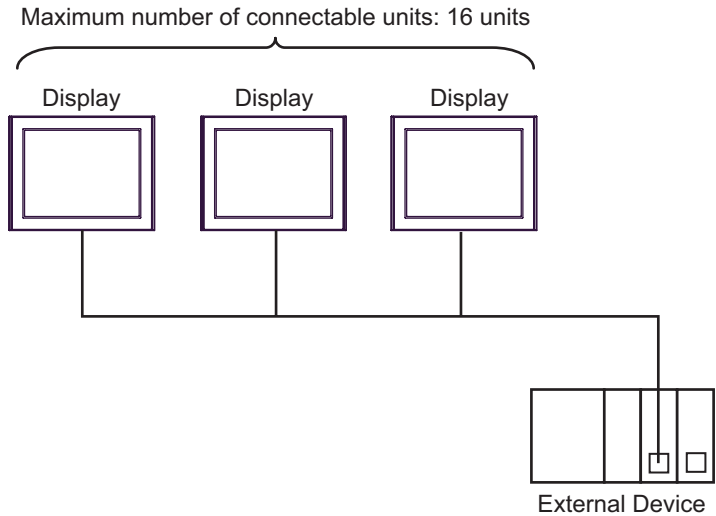

NOTE • The maximum number of connectable Displays is 16 units. However, keeping performance in consideration, the number of Displays that can be substantially used is up to 4.

- n:m Connection (Multilink connection)

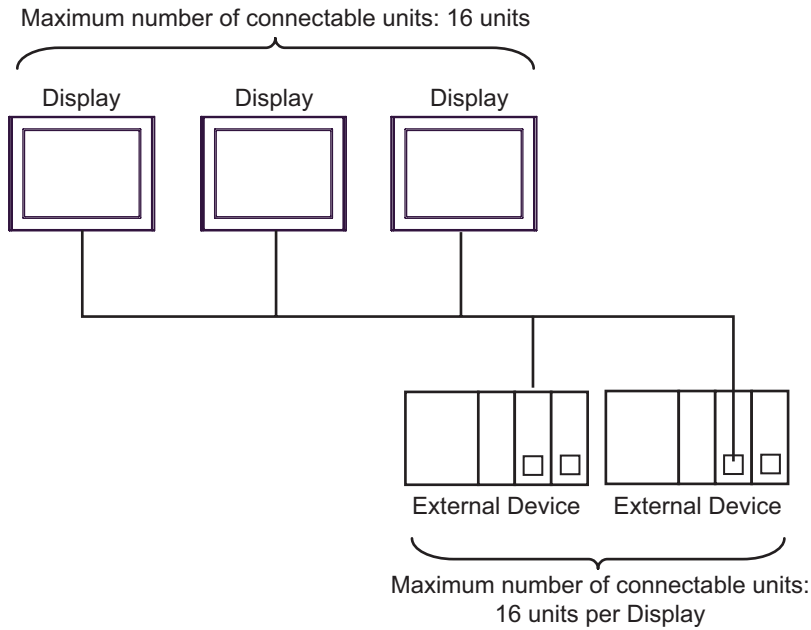

NOTE • The maximum number of connectable Displays is 16 units. However, keeping performance in consideration, the number of Displays that can be substantially used is up to 4.

■ IPC COM Port

When connecting IPC with an External Device, the COM port used depends on the series and SIO type. Please refer to the IPC manual for details.

Usable port

Series	Usable Port		
	RS-232C	RS-422/485(4 wire)	RS-422/485(2 wire)
PS-2000B	COM1 ^{*1} , COM2, COM3 ^{*1} , COM4	-	-
PS-3450A, PS-3451A, PS3000-BA, PS3001-BD	COM1, COM2 ^{*1*2}	COM2 ^{*1*2}	COM2 ^{*1*2}
PS-3650A, PS-3651A	COM1 ^{*1}	-	-
PS-3700A (Pentium®4-M) PS-3710A	COM1 ^{*1} , COM2 ^{*1} , COM3 ^{*2} , COM4	COM3 ^{*2}	COM3 ^{*2}
PS-3711A	COM1 ^{*1} , COM2 ^{*2}	COM2 ^{*2}	COM2 ^{*2}
PL-3000B, PL-3600T, PL-3600K, PL-3700T, PL-3700K, PL-3900T	COM1 ^{*1*2} , COM2 ^{*1} , COM3, COM4	COM1 ^{*1*2}	COM1 ^{*1*2}

*1 The RI/5V can be switched. Use the IPC's switch to change if necessary.

*2 Set up the SIO type with the DIP switch. Please set up as follows according to SIO type to be used.

DIP switch setting: RS-232C

DIP switch	Setting	Description
1	OFF ^{*1}	Reserved (always OFF)
2	OFF	SIO type: RS-232C
3	OFF	
4	OFF	Output mode of SD (TXD) data: Always output
5	OFF	Terminal resistance (220Ω) insertion to SD (TXD): None
6	OFF	Terminal resistance (220Ω) insertion to RD (RXD): None
7	OFF	Short-circuit of SDA (TXA) and RDA (RXA): Not available
8	OFF	Short-circuit of SDB (TXB) and RDB (RXB): Not available
9	OFF	RS (RTS) Auto control mode: Disabled
10	OFF	

*1 When using PS-3450A, PS-3451A, PS3000-BA and PS3001-BD, turn ON the set value.

DIP switch setting: RS-422/485 (4 wire)

DIP switch	Setting	Description
1	OFF	Reserved (always OFF)
2	ON	SIO type: RS-422/485
3	ON	
4	OFF	Output mode of SD (TXD) data: Always output
5	OFF	Terminal resistance (220Ω) insertion to SD (TXD): None
6	OFF	Terminal resistance (220Ω) insertion to RD (RXD): None
7	OFF	Short-circuit of SDA (TXA) and RDA (RXA): Not available
8	OFF	Short-circuit of SDB (TXB) and RDB (RXB): Not available
9	OFF ^{*1}	RS (RTS) Auto control mode: Disabled
10	OFF ^{*1}	


*1 When the connection configuration are the n:1 and n:m connections (both Multilink connections), turn ON the set value.

DIP switch setting: RS-422/485 (2 wire)

DIP switch	Setting	Description
1	OFF	Reserved (always OFF)
2	ON	SIO type: RS-422/485
3	ON	
4	OFF	Output mode of SD (TXD) data: Always output
5	OFF	Terminal resistance (220Ω) insertion to SD (TXD): None
6	OFF	Terminal resistance (220Ω) insertion to RD (RXD): None
7	ON	Short-circuit of SDA (TXA) and RDA (RXA): Available
8	ON	Short-circuit of SDB (TXB) and RDB (RXB): Available
9	ON	RS (RTS) Auto control mode: Enabled
10	ON	

2 Selection of External Device

Select the External Device to be connected to the Display.

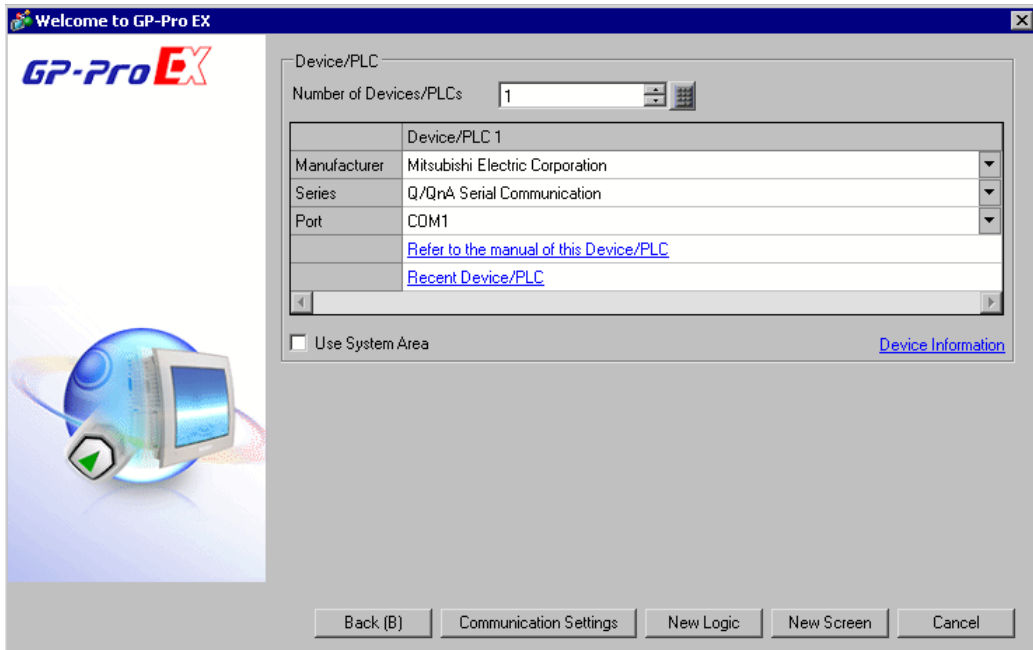

Setup Items	Setup Description
Number of Devices/PLCs	Enter an integer from 1 to 4 for the number of series to set.
Manufacturer	Select the manufacturer of the External Device to be connected. Select "Mitsubishi Electric Corporation".
Series	Select a model (series) of the External Device to be connected and connection method. Select "Q/QnA Serial Communication". Check the External Device which can be connected in "Q/QnA Serial Communication" in system configuration. ☞ "1 System Configuration" (page 3)
Port	Select the Display port to be connected to the External Device.
Use System Area	Check this option to synchronize the system data area of the Display and the device (memory) of the External Device. When synchronized, you can use the ladder program of the External Device to switch the display or display the window on the Display. Cf. GP-Pro EX Reference Manual "Appendix 1.4 LS Area (Direct Access Method)" This can be also set with GP-Pro EX or in the Display's off-line mode. Cf. GP-Pro EX Reference Manual "5.17.6 [System Settings] Setting Guide, [Display Unit] Settings Guide, System Area Settings" Cf. Maintenance/Troubleshooting Manual "2.15.1 Settings common to all Display models, [Main Unit Settings] Settings Guide, System Area Settings"

3 Example of Communication Setting

Examples of communication settings of the Display and the External Device, recommended by Pro-face, are shown.

3.1 Setting Example 1

■ Setting of GP-Pro EX

◆ Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer Series Port

Text Data Mode [Change](#)

Communication Settings

SIO Type ☒ RS232C ☐ RS422/485(2wire) ☐ RS422/485(4wire)

Speed

Data Length ☐ 7 ☒ 8

Parity ☐ NONE ☐ EVEN ☒ ODD

Stop Bit ☒ 1 ☐ 2

Flow Control ☐ NONE ☒ ER(DTR/CTS) ☐ XON/XOFF

Timeout (sec)

Retry

Wait To Send (ms)

Format

RI / VCC ☒ RI ☐ VCC

In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.

Device-Specific Settings


Allowable Number of Devices/PLCs 16

Number	Device Name	Settings
1	PLC1	Station No.=0,Connected to Q Series C24 I/F Module=OFF,Network No.=0,PC N


NOTE

- When using A1SJ71QC24N, A1SJ71QC24N-R2, AJ71QC24N or AJ71QC24N-R2, you can set the "Speed" up to 115200.

◆ Device Setting

To display the setting screen, click  ([Setting]) of External Device you want to set from [Device-Specific Settings] of [Device/PLC Settings].

When you connect multiple External Device, click  from [Device-Specific Settings] of [Device/PLC Settings] to add another External Device.

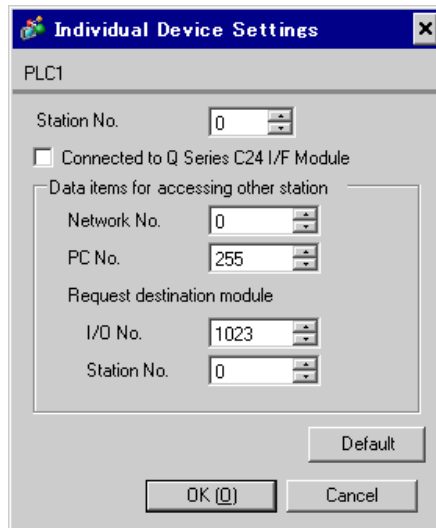

◆ Important Item

When you use 2 types of interface in A1SJ71QC24N, A1SJ71QC24N-R2, AJ71QC24N or AJ71QC24N-R2, please set the total speed of CH1 and CH2 to 115200 or less.

■ Setting of External Device

Use the front switch of the computer link unit to set the communication settings as below.

DIP Switch	Settings	Setup Description
SW1	OFF	Operation Setting = Independent Operation
SW2	ON	Data Length = 8 bits
SW3	ON	With/Without Parity = With
SW4	OFF	Parity = Odd parity
SW5	OFF	Stop Bit = 1 bit
SW6	ON	Sum Check = Enable
SW7	ON	Write during RUN = Enable
SW8	ON	Setting change Enable/Disable = Enable
SW9	OFF	Transmission Speed = 19200
SW10	ON	
SW11	ON	
SW12	OFF	

NOTE • When using A1SJ71QC24N, A1SJ71QC24N-R2, AJ71QC24N or AJ71QC24N-R2, you can set the "Speed" up to 115200.

- Station Setting Switch

Setting Switch	Settings
x 10	0
x 1	0

- Mode Setting Switch

Setting Switch	Settings
MODE (CH1)	5 ^{*1}
MODE (CH2)	5 ^{*1}

*1 Set the value according to [Format] to be used.

◆ Important Item

When you use 2 types of interface in A1SJ71QC24N, A1SJ71QC24N-R2, AJ71QC24N or AJ71QC24N-R2, please set the total speed of CH1 and CH2 to 115200 or less.

3.2 Setting Example 2

■ Setting of GP-Pro EX

◆ Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer Series Port

Text Data Mode [Change](#)

Communication Settings

SIO Type ☐ RS232C ☐ RS422/485(2wire) ☒ RS422/485(4wire)

Speed

Data Length ☐ 7 ☒ 8

Parity ☐ NONE ☐ EVEN ☒ ODD

Stop Bit ☒ 1 ☐ 2

Flow Control ☐ NONE ☒ ER(DTR/CTS) ☐ XON/XOFF

Timeout (sec)

Retry

Wait To Send (ms)


Format



RI / VCC ☒ RI ☐ VCC

In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.

[Default](#)


Device-Specific Settings

Allowable Number of Devices/PLCs 16 


Number	Device Name	Settings
 1	<input type="text" value="PLC1"/>	 Station No.=0,Connected to Q Series C24 I/F Module=OFF,Network No.=0,PC N

NOTE • When using A1SJ71QC24N, AJ71QC24N or AJ71QC24N-R4, you can set the "Speed" up to 115200.

◆ Device Setting

To display the setting screen, click  ([Setting]) of External Device you want to set from [Device-Specific Settings] of [Device/PLC Settings].

When you connect multiple External Device, click  from [Device-Specific Settings] of [Device/PLC Settings] to add another External Device.

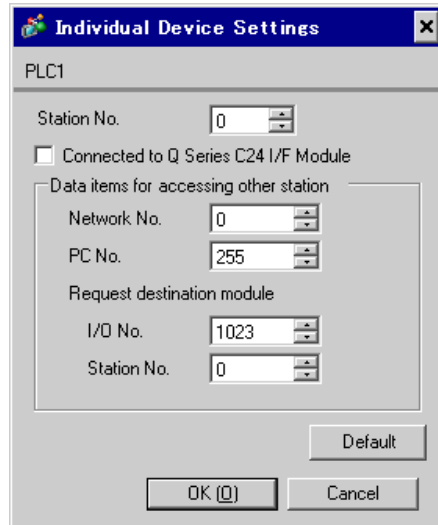

◆ Important Item

When you use 2 types of interface in A1SJ71QC24N, AJ71QC24N or AJ71QC24N-R4, please set the total speed of CH1 and CH2 to 115200 or less.

■ Setting of External Device

Use the front switch of the computer link unit to set the communication settings as below.

DIP Switch	Settings	Setup Description
SW1	OFF	Operation Setting = Independent Operation
SW2	ON	Data Length = 8 bits
SW3	ON	With/Without Parity = With
SW4	OFF	Parity = Odd parity
SW5	OFF	Stop Bit = 1 bit
SW6	ON	Sum Check = Enable
SW7	ON	Write during RUN = Enable
SW8	ON	Setting change Enable/Disable = Enable
SW9	OFF	Transmission Speed = 19200
SW10	ON	
SW11	ON	
SW12	OFF	

NOTE • When using A1SJ71QC24N, AJ71QC24N or AJ71QC24N-R4, you can set the "Speed" up to 115200.

- Station Setting Switch

Setting Switch	Settings
x 10	0
x 1	0

- Mode Setting Switch

Setting Switch	Settings
MODE (CH1)	5 ^{*1}
MODE (CH2)	5 ^{*1}

*1 Set the value according to [Format] to be used.

◆ Important Item

When you use 2 types of interface in A1SJ71QC24N, AJ71QC24N or AJ71QC24N-R4, please set the total speed of CH1 and CH2 to 115200 or less.

3.3 Setting Example 3

■ Setting of GP-Pro EX

◆ Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer Series Port

Text Data Mode [Change](#)

Communication Settings

SIO Type ☒ RS232C ☐ RS422/485(2wire) ☐ RS422/485(4wire)

Speed

Data Length ☐ 7 ☒ 8

Parity ☐ NONE ☐ EVEN ☒ ODD

Stop Bit ☒ 1 ☐ 2

Flow Control ☐ NONE ☒ ER(DTR/CTS) ☐ XON/XOFF

Timeout (sec)

Retry

Wait To Send (ms)

Format

RI / VCC ☒ RI ☐ VCC

In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.


[Default](#)

Device-Specific Settings


Allowable Number of Devices/PLCs 16

Number	Device Name	Settings
1	PLC1	Station No.=0, Connected to Q Series C24 I/F Module=0N, Network No.=0, PC N

◆ Device Setting

To display the setting screen, click  ([Setting]) of External Device you want to set from [Device-Specific Settings] of [Device/PLC Settings].

When you connect multiple External Device, click  from [Device-Specific Settings] of [Device/PLC Settings] to add another External Device.

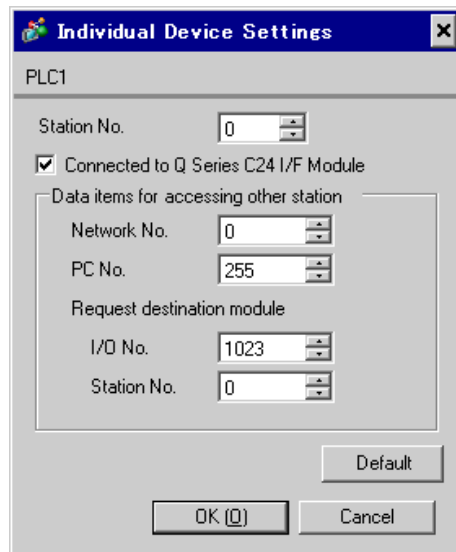

◆ Important Item

When you use 2 types of interface in QJ71C24 or QJ71C24-R2, please set the total speed of CH1 and CH2 to 115200 or less.

■ Setting of External Device

Use the GPP function software by Mitsubishi Electric Corporation to perform the communication settings as below.

- (1) Double-click [PC Parameter] from [Parameter] to select the [I/O Assign Setting] tab.
- (2) Click [Type] to select [Intelligent].
- (3) Click [Switch Settings] and set as below.

Setting Switch	Setting Value	Setup Description
Switch 1	07E6	19200/8/With/Odd/1
Switch 2	0005 ^{*1}	Mode = Form 5
Switch 5	0000	Station No. = 0

*1 Set the value according to [Format] to be used.

NOTE	• Please refer to the manual of the External Device for more detail on setting description.
-------------	---

◆ Important Item

When you use 2 types of interface in QJ71C24 or QJ71C24-R2, please set the total speed of CH1 and CH2 to 115200 or less.

3.4 Setting Example 4

■ Setting of GP-Pro EX

◆ Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1 [Change Device/PLC](#)

Summary

Manufacturer Series Port

Text Data Mode [Change](#)

Communication Settings

SIO Type ☐ RS232C ☐ RS422/485(2wire) ☒ RS422/485(4wire)

Speed

Data Length ☐ 7 ☒ 8

Parity ☐ NONE ☐ EVEN ☒ ODD

Stop Bit ☒ 1 ☐ 2

Flow Control ☐ NONE ☒ ER(DTR/CTS) ☐ XON/XOFF

Timeout (sec)

Retry

Wait To Send (ms)


Format



RI / VCC ☒ RI ☐ VCC

In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.


[Default](#)

Device-Specific Settings


Allowable Number of Devices/PLCs 16 

Number	Device Name	Settings
 1	<input type="text" value="PLC1"/>	 Station No.=0,Connected to Q Series C24 I/F Module=0N,Network No.=0,PC N

◆ Device Setting

To display the setting screen, click  ([Setting]) of External Device you want to set from [Device-Specific Settings] of [Device/PLC Settings].

When you connect multiple External Device, click  from [Device-Specific Settings] of [Device/PLC Settings] to add another External Device.

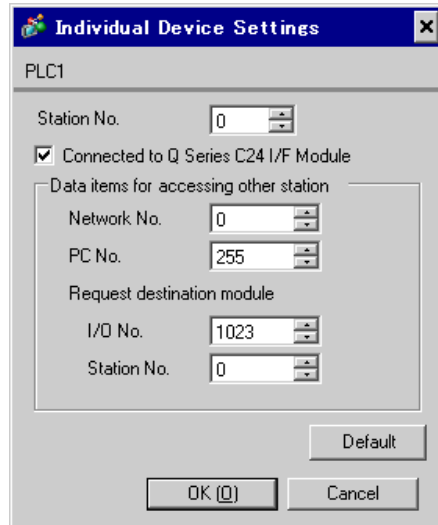

◆ Important Item

When you use 2 types of interface in QJ71C24, please set the total speed of CH1 and CH2 to 115200 or less.

■ Setting of External Device

Use the GPP function software by Mitsubishi Electric Corporation to perform the communication settings as below.

- (1) Double-click [PC Parameter] from [Parameter] to select the [I/O Assign Setting] tab.
- (2) Click [Type] to select [Intelligent].
- (3) Click [Switch Settings] and set as below.

Setting Switch	Setting Value	Setup Description
Switch 3	07E6	19200/8/With/Odd/1
Switch 4	0005 ^{*1}	Mode = Form 5
Switch 5	0000	Station No. = 0

*1 Set the value according to [Format] to be used.

NOTE	• Please refer to the manual of the External Device for more detail on setting description.
-------------	---

◆ Important Item

When you use 2 types of interface in QJ71C24, please set the total speed of CH1 and CH2 to 115200 or less.

3.5 Setting Example 5

■ Setting of GP-Pro EX

◆ Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer Series Port

Text Data Mode [Change](#)

Communication Settings

SIO Type ☒ RS232C ☐ RS422/485(2wire) ☐ RS422/485(4wire)

Speed

Data Length ☐ 7 ☒ 8

Parity ☐ NONE ☐ EVEN ☒ ODD

Stop Bit ☒ 1 ☐ 2

Flow Control ☐ NONE ☒ ER(DTR/CTS) ☐ XON/XOFF

Timeout (sec)

Retry


Wait To Send (ms)



Format

RI / VCC ☒ RI ☐ VCC


In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.

Device-Specific Settings


Allowable Number of Devices/PLCs 16 

Number	Device Name	Settings
 1	<input type="text" value="PLC1"/>	 Station No.=0,Connected to Q Series C24 I/F Module=OFF,Network No.=0,PC N

◆ Device Setting

To display the setting screen, click  ([Setting]) of External Device you want to set from [Device-Specific Settings] of [Device/PLC Settings].

When you connect multiple External Device, click  from [Device-Specific Settings] of [Device/PLC Settings] to add another External Device.

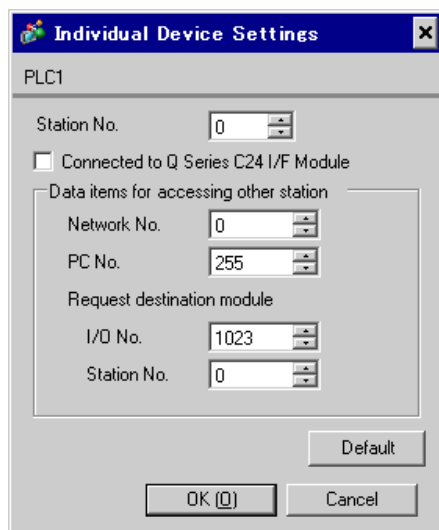

The dialog box is titled "Individual Device Settings" and contains the following fields and controls:

- PLC1**: Label for the device.
- Station No.**: A numeric input field with a value of 0.
- ☐ **Connected to Q Series C24 I/F Module**: A checkbox.
- Data items for accessing other station**: A group box containing:
 - Network No.**: A numeric input field with a value of 0.
 - PC No.**: A numeric input field with a value of 255.
 - Request destination module**: A label for the following fields.
 - I/O No.**: A numeric input field with a value of 1023.
 - Station No.**: A numeric input field with a value of 0.
- Default**: A button.
- OK (O)**: A button.
- Cancel**: A button.

■ Setting of External Device

Use the GPP function software by Mitsubishi Electric Corporation to perform the communication settings as below.

(1) Double-click [PC Parameter] from [Parameter] to select [Serial Communication Settings].

(2) Set as below.

Setup Items	Settings
Use Serial Communication Function ^{*1}	Use
Baud Rate	19.2Kbps
Sum Check	Enable
Transmission Wait Time	No Wait
Write Setting during RUN	Enable

^{*1} Check the checkbox to make other setting items become available to set.

3.6 Setting Example 6

■ Setting of GP-Pro EX

◆ Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer Series Port

Text Data Mode [Change](#)

Communication Settings

SIO Type ☐ RS232C ☐ RS422/485(2wire) ☒ RS422/485(4wire)

Speed

Data Length ☐ 7 ☒ 8

Parity ☐ NONE ☐ EVEN ☒ ODD

Stop Bit ☒ 1 ☐ 2

Flow Control ☐ NONE ☒ ER(DTR/CTS) ☐ XON/XOFF

Timeout (sec)

Retry

Wait To Send (ms)

Format

RI / VCC ☒ RI ☐ VCC

In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.


Device-Specific Settings

Allowable Number of Devices/PLCs 16


Number	Device Name	Settings
1	PLC1	Station No.=0,Connected to Q Series C24 I/F Module=0N,Network No.=0,PC N

NOTE • When simultaneously using GP2000 Series during multilink connection, select "QnA Comp. 3C Frame: Format 4" from the "Format".

◆ Device Setting

To display the setting screen, click  ([Setting]) of External Device you want to set from [Device-Specific Settings] of [Device/PLC Settings].

When you connect multiple External Device, click  from [Device-Specific Settings] of [Device/PLC Settings] to add another External Device.

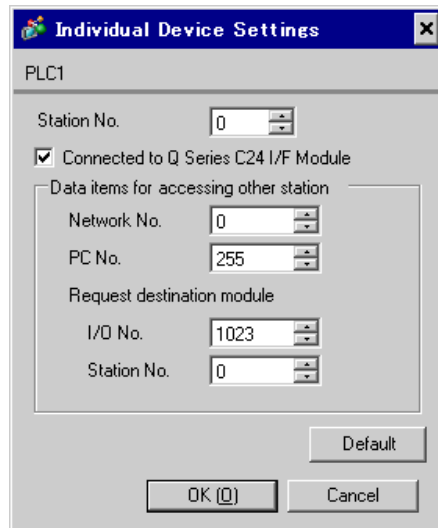

◆ Important Item

When you use 2 types of interface in QJ71C24, please set the total speed of CH1 and CH2 to 115200 or less.

■ Setting of External Device

Use the GPP function software by Mitsubishi Electric Corporation to perform the communication settings as below.

- (1) Double-click [PC Parameter] from [Parameter] to select the [I/O Assign Setting] tab.
- (2) Click [Type] to select [Intelligent].
- (3) Click [Switch Settings] and set as below.

Setting Switch	Setting Value	Setup Description
Switch 3	07E6	19200/8/With/Odd/1
Switch 4	0005 ^{*1}	Mode = Form 5
Switch 5	0000	Station No. = 0

*1 Set the value according to [Format] to be used.

NOTE

- Please refer to the manual of the External Device for more detail on setting description.

◆ Important Item

When you use 2 types of interface in QJ71C24, please set the total speed of CH1 and CH2 to 115200 or less.

3.7 Setting Example 7

■ Setting of GP-Pro EX

◆ Communication Settings

To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Device/PLC 1

Summary [Change Device/PLC](#)

Manufacturer Series Port


Text Data Mode [Change](#)

Communication Settings

SID Type ☐ RS232C ☐ RS422/485(2wire) ☒ RS422/485(4wire)
 Speed
 Data Length ☐ 7 ☒ 8
 Parity ☐ NONE ☐ EVEN ☒ ODD
 Stop Bit ☒ 1 ☐ 2
 Flow Control ☐ NONE ☒ ER(DTR/CTS) ☐ XON/XOFF
 Timeout (sec)
 Retry
 Wait To Send (ms)
 Format

☐ RI / VCC ☒ RI ☐ VCC
 In the case of RS232C, you can select the 9th pin to RI (Input) or VCC (5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.

Device-Specific Settings


Allowable Number of Devices/PLCs 16 

Number	Device Name	Settings
1	PLC1	Station No.=0, Connected to Q Series C24 I/F Module=OFF, Network No.=0, PC N


NOTE

- When using A1SJ71QC24N, AJ71QC24N or AJ71QC24N-R4, you can set the "Speed" up to 115200.
- When simultaneously using GP2000 Series during multilink connection, select "QnA Comp. 3C Frame: Format 4" from the "Format".

◆ Device Setting

To display the setting screen, click  ([Setting]) of External Device you want to set from [Device-Specific Settings] of [Device/PLC Settings].

When you connect multiple External Device, click  from [Device-Specific Settings] of [Device/PLC Settings] to add another External Device.

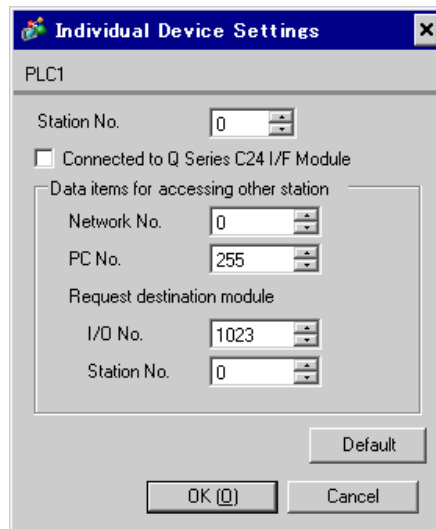

◆ Important Item

When you use 2 types of interface in A1SJ71QC24N, AJ71QC24N or AJ71QC24N-R4, please set the total speed of CH1 and CH2 to 115200 or less.

■ Setting of External Device

Use the front switch of the computer link unit to set the communication settings as below.

DIP Switch	Settings	Setup Description
SW1	OFF	Operation Setting = Independent Operation
SW2	ON	Data Length = 8 bits
SW3	ON	With/Without Parity = With
SW4	OFF	Parity = Odd parity
SW5	OFF	Stop Bit = 1 bit
SW6	ON	Sum Check = Enable
SW7	ON	Write during RUN = Enable
SW8	ON	Setting change Enable/Disable = Enable
SW9	OFF	Transmission Speed = 19200
SW10	ON	
SW11	ON	
SW12	OFF	

NOTE • When using A1SJ71QC24N, AJ71QC24N or AJ71QC24N-R4, you can set the "Speed" up to 115200.

- Station Setting Switch

Setting Switch	Settings
x 10	0
x 1	0

- Mode Setting Switch

Setting Switch	Settings
MODE (CH1)	5 ^{*1}
MODE (CH2)	5 ^{*1}

*1 Set the value according to [Format] to be used.

◆ Important Item

When you use 2 types of interface in A1SJ71QC24N, AJ71QC24N or AJ71QC24N-R4, please set the total speed of CH1 and CH2 to 115200 or less.

4 Setup Items

Set communication settings of the Display with GP-Pro EX or in off-line mode of the Display.

The setting of each parameter must be identical to that of External Device.

☞ "3 Example of Communication Setting" (page 11)

4.1 When setting with GP-Pro EX

■ Communication Settings


To display the setting screen, select [Device/PLC Settings] from [System setting window] in workspace.

Setup Items	Setup Description
SIO Type	Select the SIO type to communicate with the External Device.
Speed	Select speed between the External Device and the Display.
Data Length	Select data length.
Parity	Select how to check parity.
Stop Bit	Select stop bit length.
Flow Control	Select the communication control method to prevent overflow of transmission and reception data.
Timeout	Use an integer from 1 to 127 to enter the time (s) for which the Display waits for the response from the External Device. NOTE In case of communicating via network, please set larger value than the response monitoring time of the relay station for timeout settings.
Retry	In case of no response from the External Device, use an integer from 0 to 255 to enter how many times the Display retransmits the command.
Wait To Send	Use an integer from 0 to 255 to enter standby time (ms) for the Display from receiving packets to transmitting next commands.


continued to next page

Setup Items	Setup Description
Format	<p>Select the communication frame for the use of MELSEC communication protocol, from "QnA Comp. 3C Frame: Format 4" or "QnA Comp. 4C Frame: Format 5".</p> <p>NOTE</p> <p>When simultaneously using GP2000 Series during multilink connection, select "QnA Comp. 3C Frame: Format 4"</p>
RI/VCC	<p>You can switch RI/VCC of the 9th pin when you select RS232C for SIO type.</p> <p>It is necessary to change RI/5V by changeover switch of IPC when connect with IPC.</p> <p>Please refer to the manual of the IPC for more detail.</p>

■ Device Setting

To display the setting screen, click  ([Setting]) of External Device you want to set from [Device-Specific Settings] of [Device/PLC Settings].

When [Allowable No. of Device/PLCs] is multiple, click  from [Device-Specific Settings] of [Device/PLC Settings] to add another External Device.



Setup Items	Setup Description
Station No.	Use an integer from 0 to 31 to enter the station number of the External Device directly connected to the Display.
Connected to Q Series C24 I/F Module	Check this checkbox only when the Q Series C24 I/F unit is used. If this is checked when the Q Series C24 I/F unit is not used, the error may be displayed on the External Device.
Network No.	Set when you communicate via network. Use an integer from 0 to 239 to enter network No. of the External Device to communicate. If you do not communicate via network, enter 0.
PC No.	Set when you communicate via network. Use an integer from 0 to 64 or 125 to 126 to enter PC No. of the External Device to communicate. If you do not communicate via network, enter 255.
Request destination module I/O No.	Set when you communicate via network. Use an integer from 0 to 511 to enter I/O No. of the External Device to communicate. If you do not communicate via network, enter 1023.
Request destination module Station No.	Set when you communicate via network. Use an integer from 0 to 31 to enter station No. of the External Device to communicate. If you do not communicate via network, enter 0.

4.2 Communication Settings in Off-line Mode

NOTE

- Refer to the Maintenance/Troubleshooting manual for information on how to enter off-line mode or about the operation.

Cf. Maintenance/Troubleshooting Manual "2.2 Off-line Mode"

- The number of the setup items to be displayed for 1 page in the off-line mode depends on the Display in use. Please refer to the Reference manual for details.

■ Communication Settings

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Settings] in off-line mode. Touch the External Device you want to set from the displayed list.

Comm.	Device	Option		
Q/QnA Serial Communication [COM1] Page 1/1				
SIO Type	RS232C			
Speed	19200			
Data Length	7			
Parity	NONE			
Stop Bit	1			
Flow Control	ER(DTR/CTS)			
Timeout(s)	3			
Retry	2			
Wait To Send(ms)	0			
Format	QnA Comp. 4C Frame: Format 5			
Exit		Back		2009/09/08 16:40:28

Setup Items	Setup Description
SIO Type	<p>Select the SIO type to communicate with the External Device.</p> <p>IMPORTANT</p> <p>To make the communication settings correctly, confirm the serial interface specifications of Display unit for [SIO Type].</p> <p>We cannot guarantee the operation if a communication type that the serial interface does not support is specified.</p> <p>For details concerning the serial interface specifications, refer to the manual for Display unit.</p>
Speed	Select speed between the External Device and the Display.
Data Length	Select data length.
Parity	Select how to check parity.
Stop Bit	Select stop bit length.
Flow Control	Select the communication control method to prevent overflow of transmission and reception data.

continued to next page

Setup Items	Setup Description
Timeout	<p>Use an integer from 1 to 127 to enter the time (sec) for which the Display waits for the response from the External Device.</p> <p>NOTE</p> <p>In case of communicating via network, please set larger value than the response monitoring time of the relay station for timeout settings.</p>
Retry	<p>In case of no response from the External Device, use an integer from 0 to 255 to enter how many times the Display retransmits the command.</p>
Wait To Send	<p>Use an integer from 0 to 255 to enter standby time (ms) for the Display from receiving packets to transmitting next commands.</p>
Format	<p>Select the communication frame for the use of MELSEC communication protocol, from "QnA Comp. 3C Frame: Format 4" or "QnA Comp. 4C Frame: Format 5".</p> <p>NOTE</p> <p>When simultaneously using GP2000 Series during multilink connection, select "QnA Comp. 3C Frame: Format 4"</p>

■ Device Setting

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Settings]. Touch the External Device you want to set from the displayed list, and touch [Device].

Comm.	Device	Option		
Q/QnA Serial Communication		[COM1]	Page 1/1	
Device/PLC Name [PLC1] ▼				
Station No.		0 ▼ ▲		
Q Series C24 I/F		ON ▼		
Network No.		0 ▼ ▲		
PC No.		255 ▼ ▲		
Request destination module				
I/O No.		1023 ▼ ▲		
Station No.		0 ▼ ▲		
Exit		Back		2009/09/08 16:40:32

Setup Items	Setup Description
Device/PLC Name	Select the External Device for device setting. Device name is a title of External Device set with GP-Pro EX.(Initial value [PLC1])
Station No.	Use an integer from 0 to 31 to enter the station number of the External Device directly connected to the Display.
Q Series C24 I/F	Select “ON” and “OFF” respectively when the Q Series C24 I/F unit is used and when the Q Series C24 I/F unit is not used. If “ON” is selected when the Q Series C24 I/F unit is not used, the error may be displayed on the External Device.
Network No.	Set when you communicate via network. Use an integer from 0 to 239 to enter network No. of the External Device to communicate. If you do not communicate via network, enter 0.
PC No.	Set when you communicate via network. Use an integer from 0 to 64 or 125 to 126 to enter PC No. of the External Device to communicate. If you do not communicate via network, enter 255.
Request destination module I/O No.	Set when you communicate via network. Use an integer from 0 to 511 to enter I/O No. of the External Device to communicate. If you do not communicate via network, enter 1023.
Request destination module Station No.	Set when you communicate via network. Use an integer from 0 to 31 to enter station No. of the External Device to communicate. If you do not communicate via network, enter 0.

IMPORTANT

- Do not set the duplicate device settings in multiple devices. Illegal address may be read.

■ Option

To display the setting screen, touch [Device/PLC Settings] from [Peripheral Settings]. Touch the External Device you want to set from the displayed list, and touch [Option].

Comm.	Device	Option		
Q/QnA Serial Communication [COM1] Page 1/1				
<p>RI / VCC <input checked="" type="radio"/> RI <input type="radio"/> VCC</p> <p>In the case of RS232C, you can select the 9th pin to RI(Input) or VCC(5V Power Supply). If you use the Digital's RS232C Isolation Unit, please select it to VCC.</p>				
Exit		Back		2009/09/08 16:40:35

Setup Items	Setup Description
RI/VCC	You can switch RI/VCC of the 9th pin when you select RS232C for SIO type. It is necessary to change RI/5V by changeover switch of IPC when connect with IPC. Please refer to the manual of the IPC for more detail.

NOTE	• GP-4100 series do not have the [Option] setting in the off-line mode.
-------------	---

5 Cable Diagram

The cable diagram shown below may be different from the cable diagram recommended by Mitsubishi Electric Corp. Please be assured there is no operational problem in applying the cable diagram shown in this manual.

- The FG pin of the External Device body must be D-class grounded. Please refer to the manual of the External Device for more details.
- SG and FG are connected inside the Display. When connecting SG to the External Device, design the system not to form short-circuit loop.
- Connect the isolation unit, when communication is not stabilized under the influence of a noise etc..


Cable Diagram 1

Display (Connection Port)	Cable		Notes
GP3000 (COM1) ST (COM1) IPC*1 PC/AT	1A	Mitsubishi Q link cable by Pro-face CA3-CBLLNKMQ-01	The cable length must be 15m or less.
	1B	User-created cable	
GP-4105 (COM1)	1C	User-created cable	


*1 Only the COM port which can communicate by RS-232C can be used.

☞ ■ IPC COM Port (page 8)


1A)

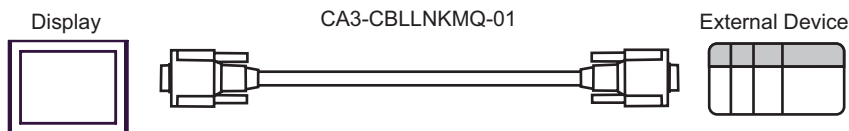

1B)

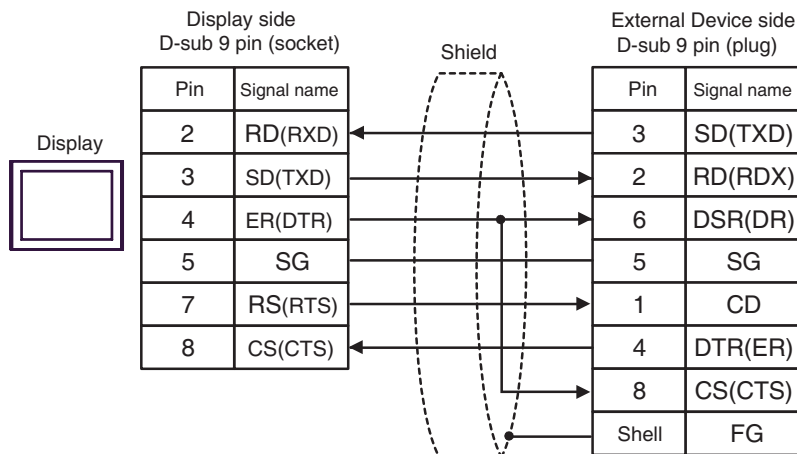

1C)

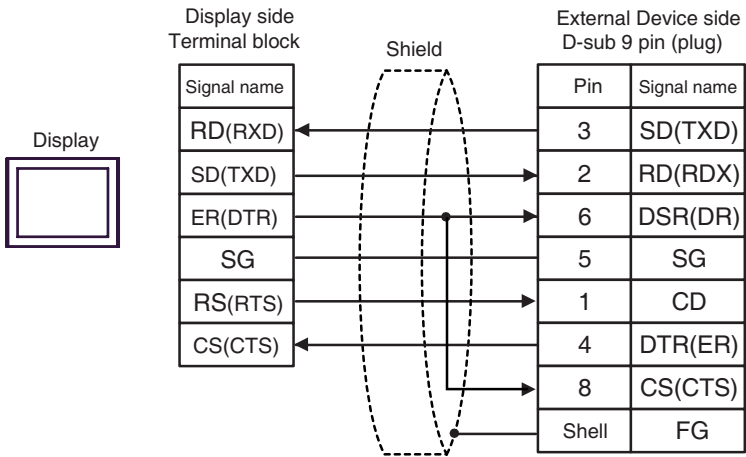

Cable Diagram 2

Display (Connection Port)	Cable		Notes
GP3000 ^{*1} (COM1) AGP-3302B (COM2) ST ^{*2} (COM2) IPC ^{*3}	2A	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Connector terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable	The cable length must be 500m or less.
	2B	User-created cable	
GP3000 ^{*4} (COM2)	2C	Online adapter by Pro-face CA4-ADPONL-01 + Connector terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable	
	2D	Online adapter by Pro-face CA4-ADPONL-01 + User-created cable	
GP-4106 (COM1)	2E	User-created cable	

*1 All GP3000 models except AGP-3302B

*2 All ST models except AST-3211A and AST-3302B


*3 Only the COM port which can communicate by RS-422/485 (4 wire) can be used.

 ■ IPC COM Port (page 8)


*4 All GP3000 models except GP-3200 series and AGP-3302B

2A)

- 1:1 Connection

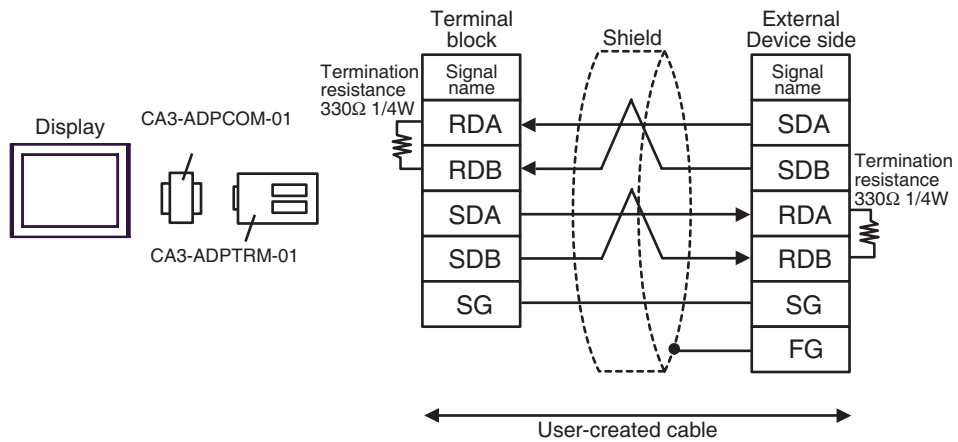


- 1:n Connection

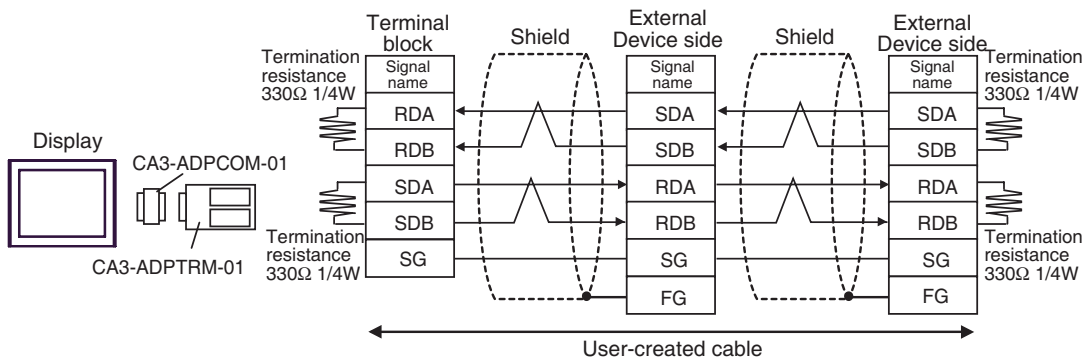


2C)

- 1:1 Connection

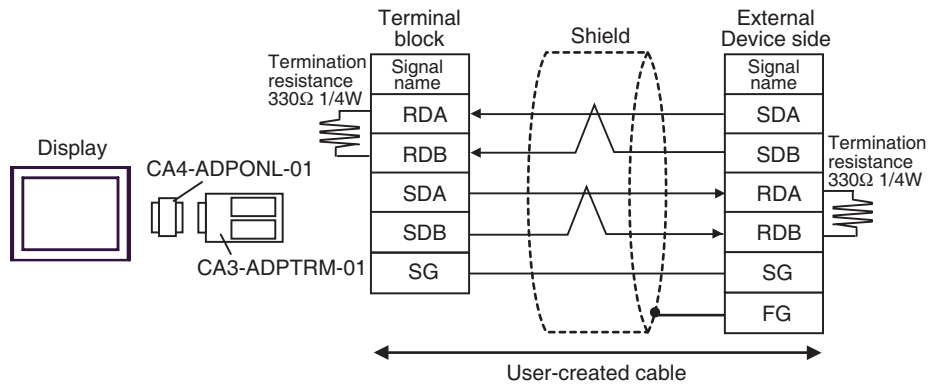


- 1:n Connection

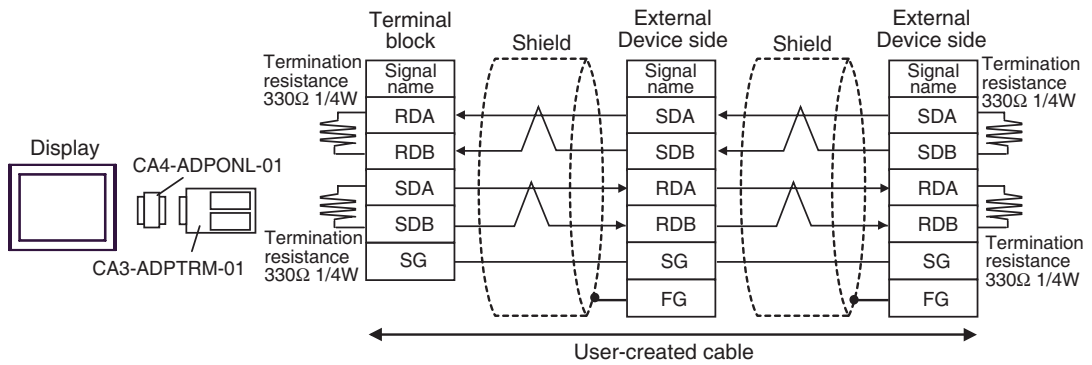


2D)

- 1:1 Connection

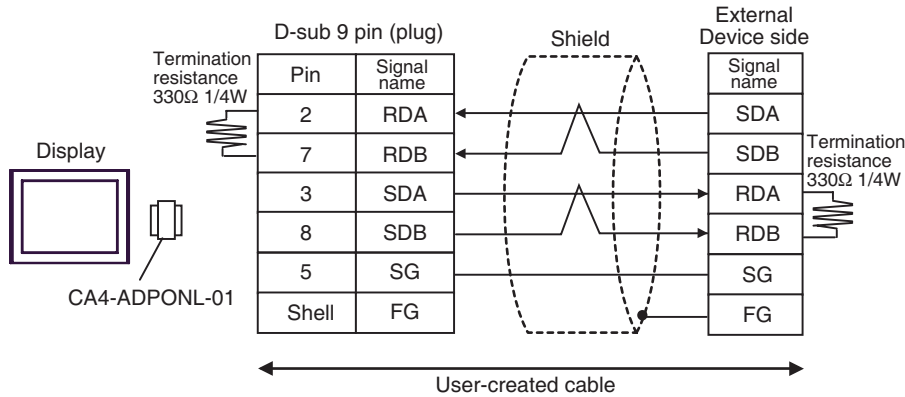


- 1:n Connection

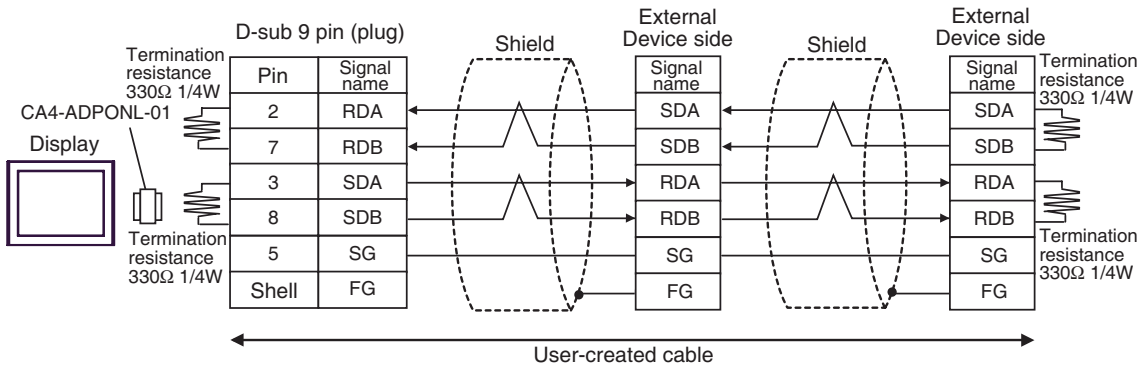

2E)


- 1:1 Connection

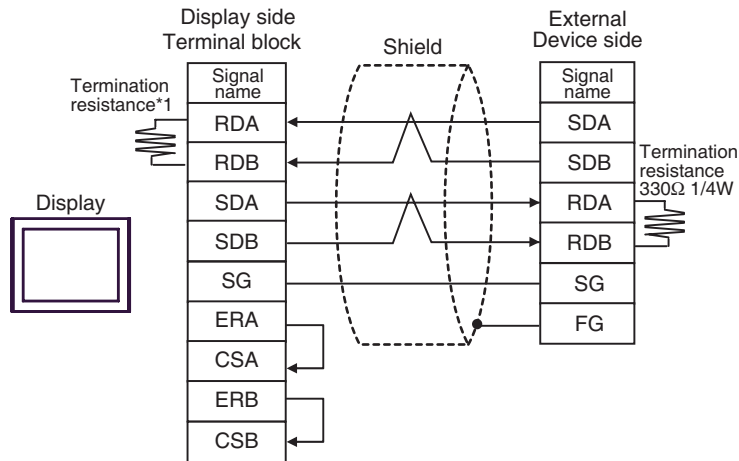

- *1 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.

DIP Switch No.	Set Value
1	OFF
2	OFF
3	ON
4	OFF

- 1:n Connection

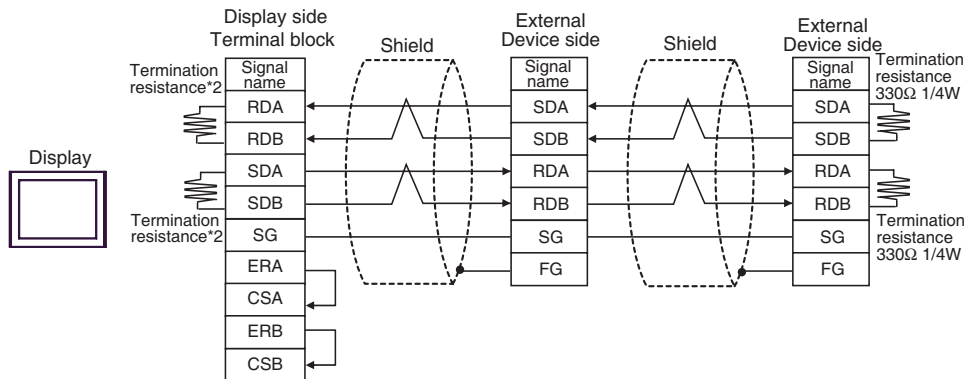

- *2 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.


DIP Switch No.	Set Value
1	ON
2	OFF
3	ON
4	OFF

Cable Diagram 3


Display (Connection Port)	Cable		Notes
GP3000 (COM1) ST (COM1) IPC*1 PC/AT	3A	Mitsubishi Q connection cable by Pro-face CA3-CBLQ-01 (5m) or RS-232C cable by Mitsubishi Electric Corp. QC30R2 (3m) or RS-232C cable for QCPU connection by Diatrend Corp. DQCABR2V-H	Available to order the length of DQCABR2V-H by Diatrend Corp. up to 15m.
GP-4105 (COM1)	3B	Mitsubishi PLC Q Series CPU I/F Cable by Pro-face ZC9CBQ31(3m)	

*1 Only the COM port which can communicate by RS-232C can be used.
☞ ■ IPC COM Port (page 8)

3A)

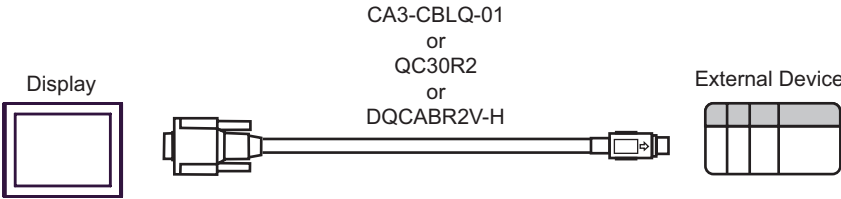


3B)

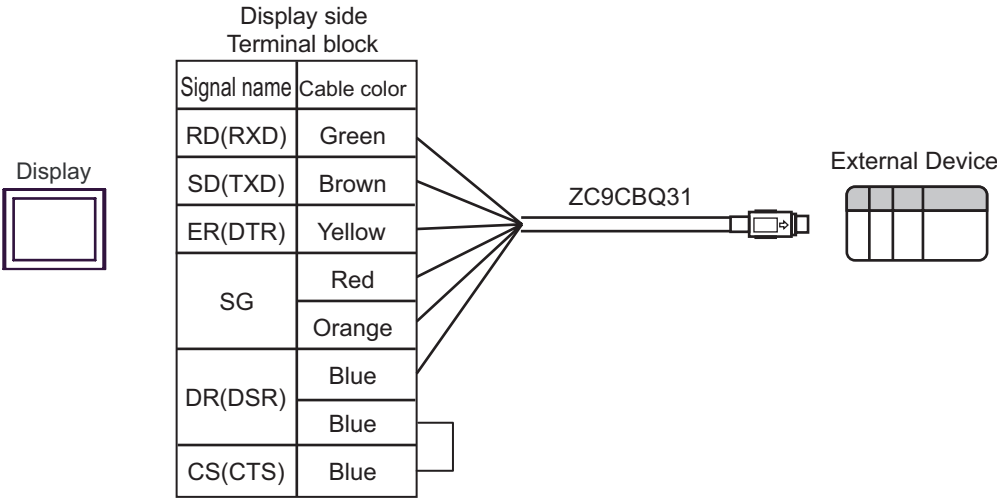


Cable Diagram 4

Display (Connection Port)	Cable		Notes
GP3000 (COM1) ST (COM1) IPC*1 PC/AT	4A	RS-232C cable by Pro-face CA3-CBL232/5M-01 (5m)	The cable length must be 15m or less.
	4B	User-created cable	
GP-4105 (COM1)	4C	User-created cable	


*1 Only the COM port which can communicate by RS-232C can be used.

 ■ IPC COM Port (page 8)


4A)

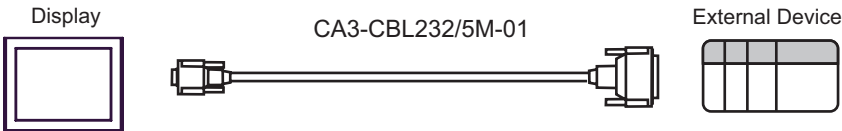

4B)

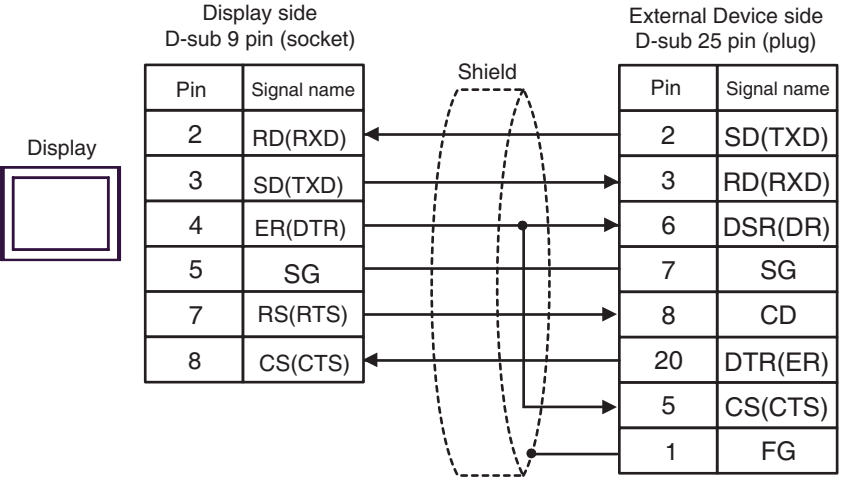

4C)

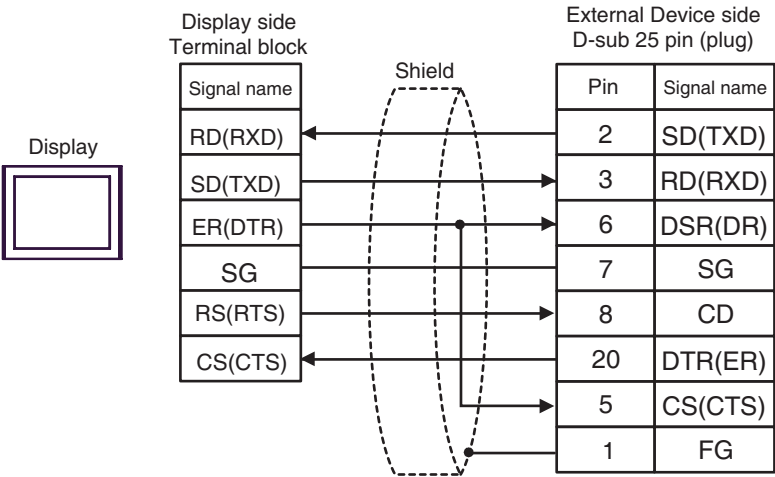

Cable Diagram 5

Display (Connection Port)	Cable		Notes
GP3000 ^{*1} (COM1) AGP-3302B (COM2) ST ^{*2} (COM2) IPC ^{*3}	5A	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Connector terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable	The cable length must be 500m or less.
	5B	User-created cable	
GP3000 ^{*4} (COM2)	5C	Online adapter by Pro-face CA4-ADPONL-01 + Connector terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable	
	5D	Online adapter by Pro-face CA4-ADPONL-01 + User-created cable	
GP-4106 (COM1)	5E	User-created cable	

*1 All GP3000 models except AGP-3302B


*2 All ST models except AST-3211A and AST-3302B

*3 Only the COM port which can communicate by RS-422/485 (4 wire) can be used.

 ■ IPC COM Port (page 8)


*4 All GP3000 models except GP-3200 series and AGP-3302B

5A)

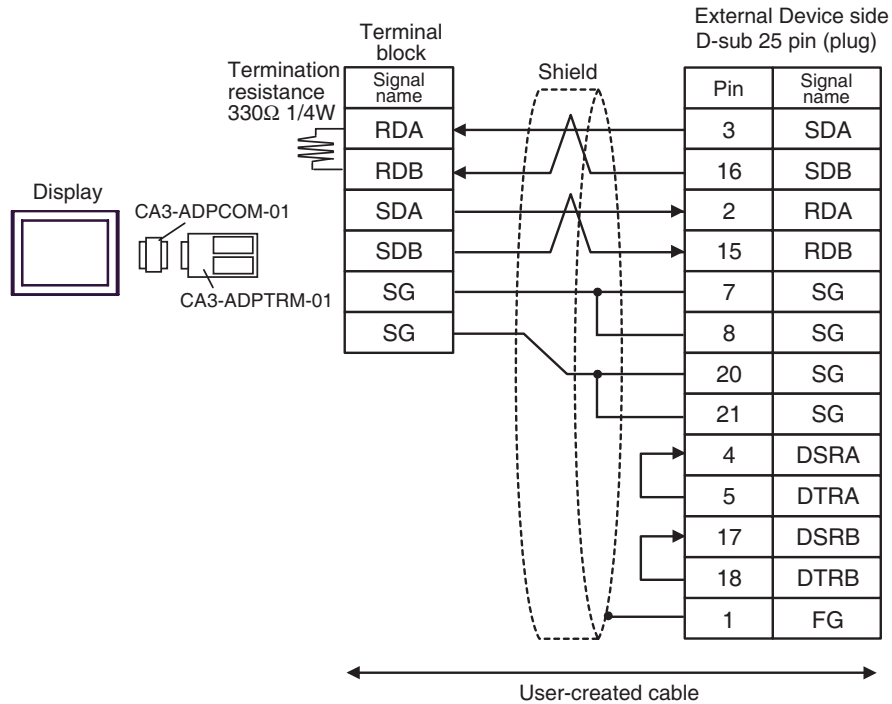**NOTE**


- As the External Device has the termination resistance built-in, you do not need to connect the termination resistance.

5B)

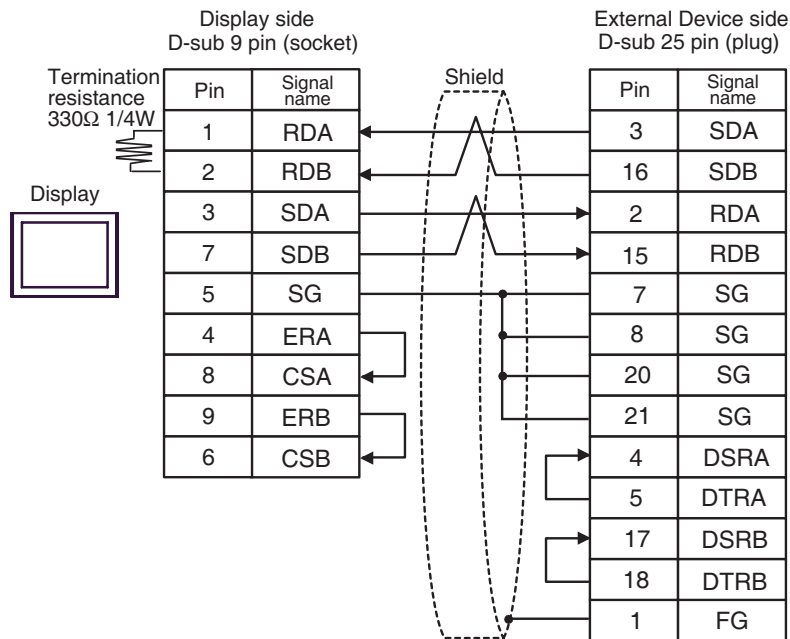**NOTE**


- As the External Device has the termination resistance built-in, you do not need to connect the termination resistance.

5C)

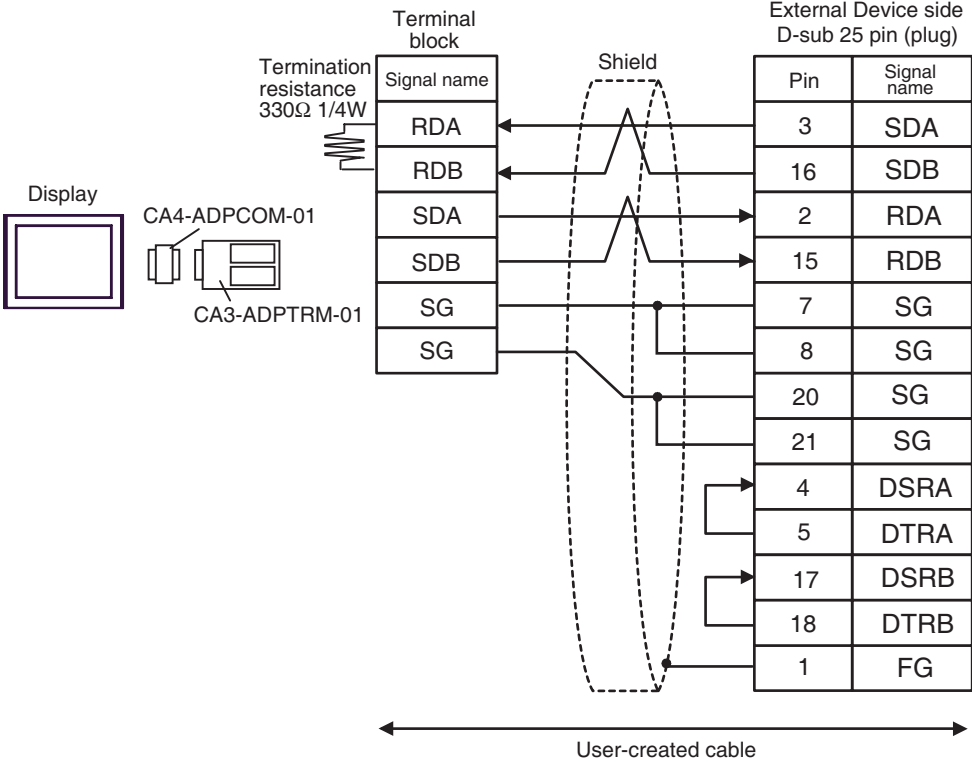


NOTE • As the External Device has the termination resistance built-in, you do not need to connect the termination resistance.

5D)

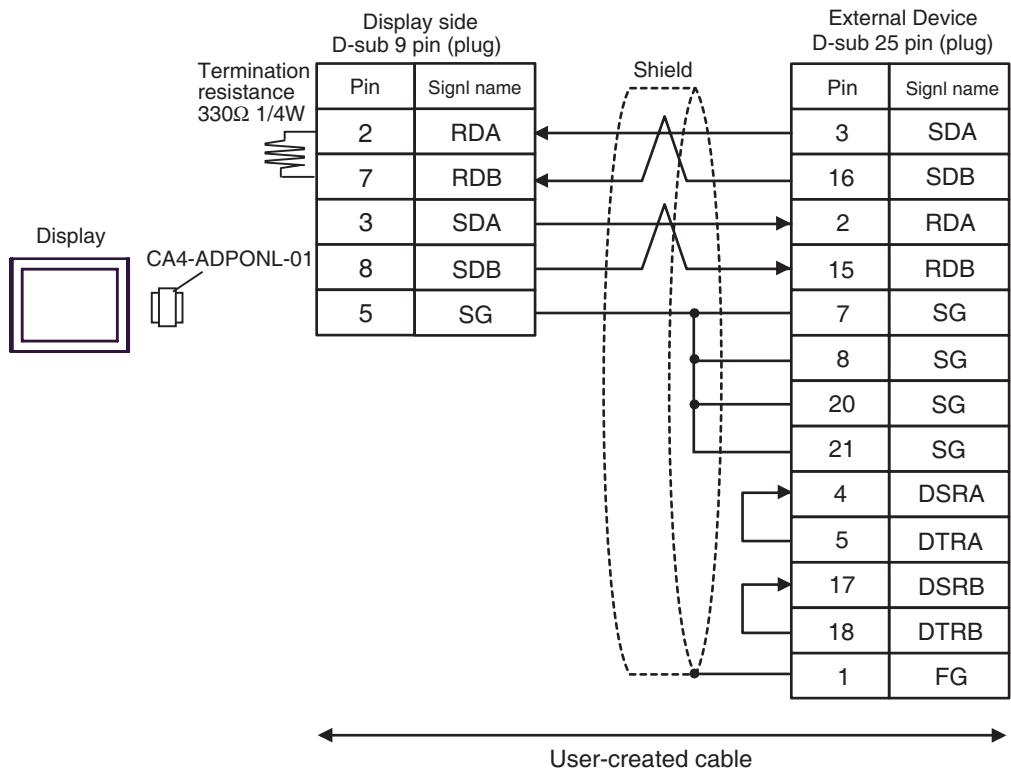

NOTE • As the External Device has the termination resistance built-in, you do not need to connect the termination resistance.

5E)

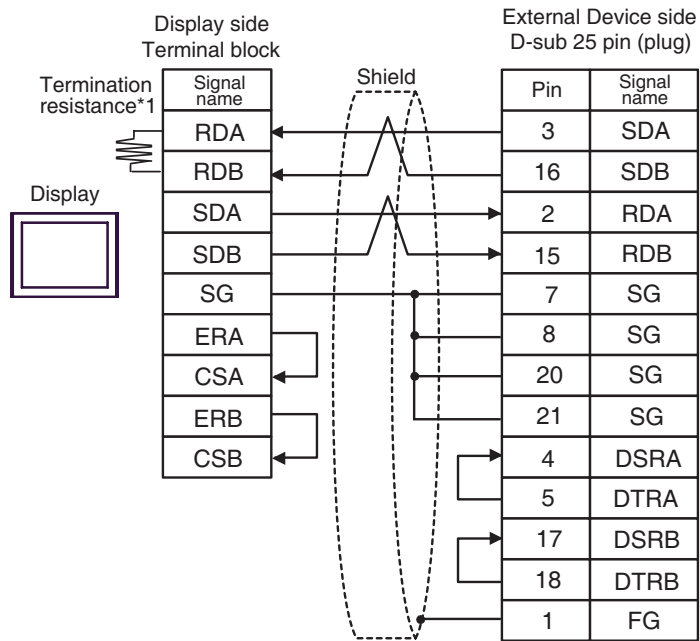

NOTE • As the External Device has the termination resistance built-in, you do not need to connect the termination resistance.

*1 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.

DIP Switch No.	Set Value
1	OFF
2	OFF
3	ON
4	OFF

Cable Diagram 6

Display (Connection Port)	Cable		Notes
GP3000 ^{*1} (COM1) AGP-3302B (COM2) ST ^{*2} (COM2) IPC ^{*3}	6A	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Connector terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable	The cable length must be 1200m or less.
	6B	COM port conversion adapter by Pro-face CA3-ADPCOM-01 + Multilink cable by Pro-face CA3-CBLMLT-01 + User-created cable	
	6C	User-created cable	
GP3000 ^{*4} (COM2)	6D	Online adapter by Pro-face CA4-ADPONL-01 + Connector terminal block conversion adapter by Pro-face CA3-ADPTRM-01 + User-created cable	
	6E	Online adapter by Pro-face CA4-ADPONL-01 + Multilink cable by Pro-face CA3-CBLMLT-01 + User-created cable	
	6F	Online adapter by Pro-face CA4-ADPONL-01 + User-created cable	
GP-4106 (COM1)	6G	User-created cable	

*1 All GP3000 models except AGP-3302B


*2 All ST models except AST-3211A and AST-3302B

*3 Only the COM port which can communicate by RS-422/485 (4 wire) can be used.


 ■ IPC COM Port (page 8)

*4 All GP3000 models except GP-3200 series and AGP-3302B


6A)

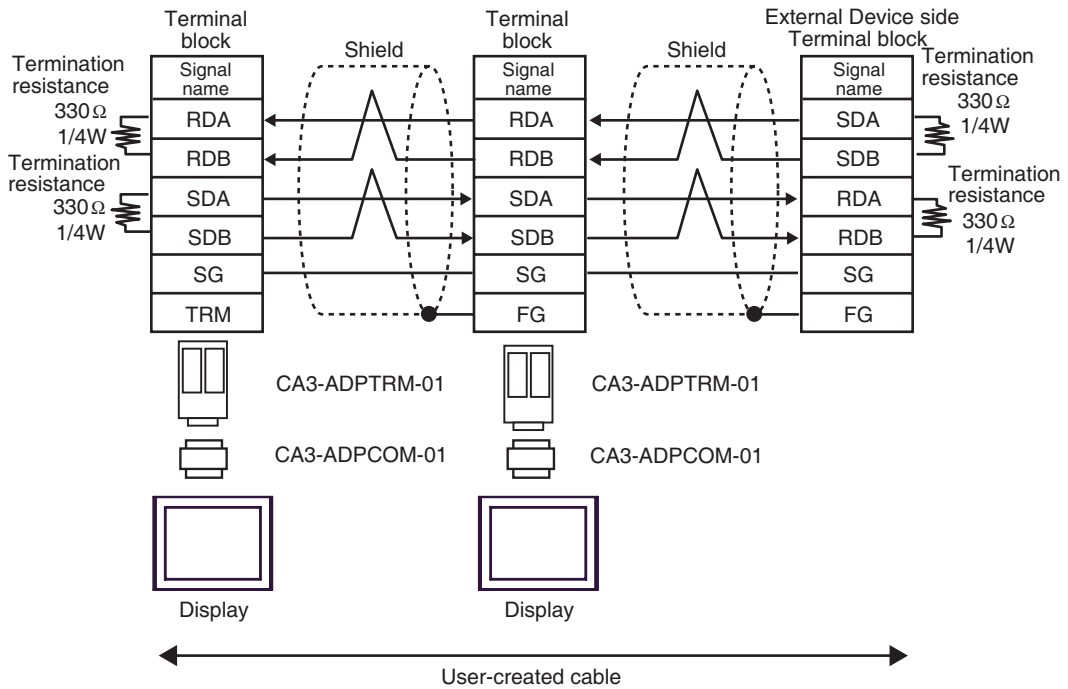


6B)

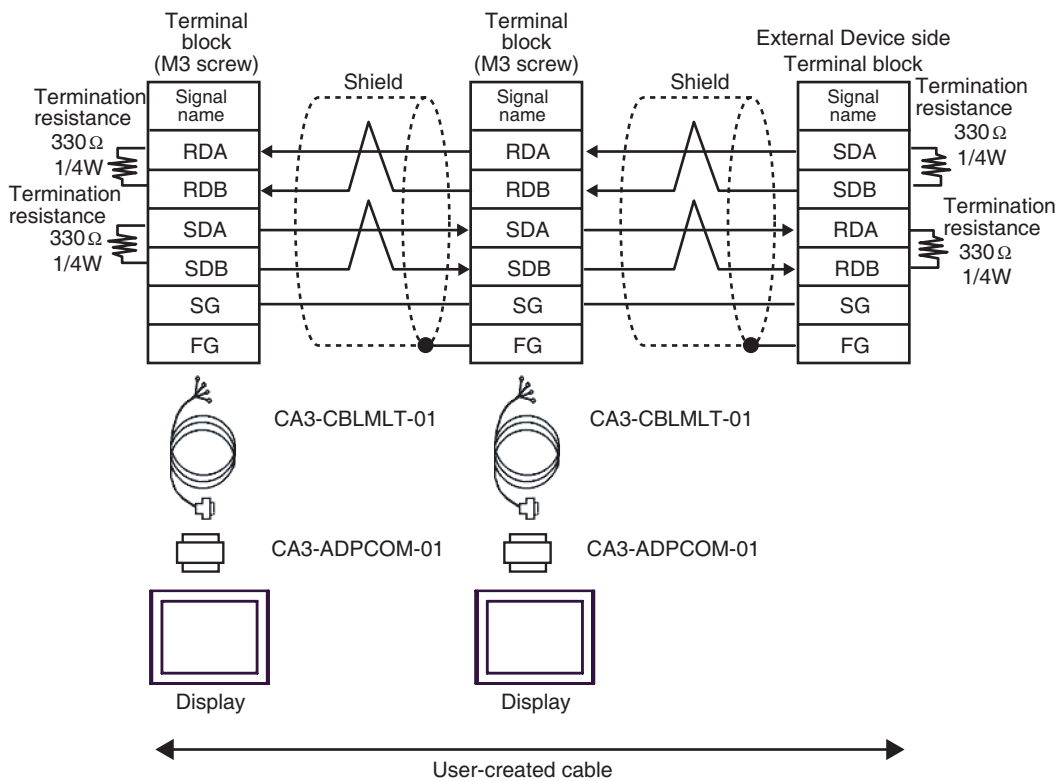


6C)

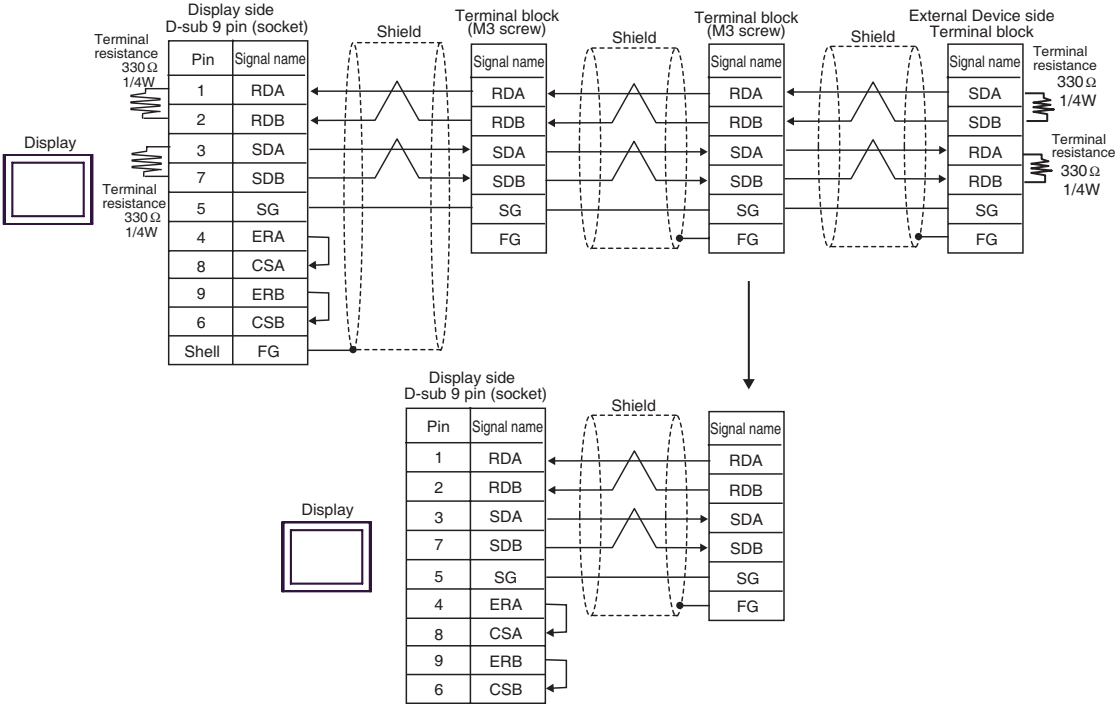


6D)

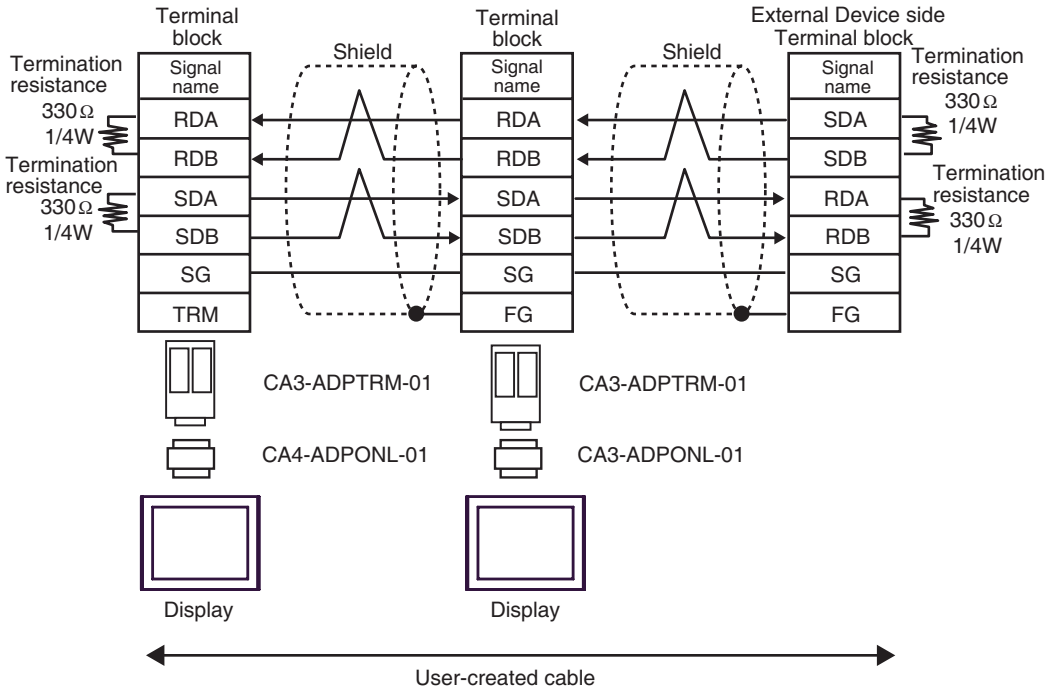


6E)

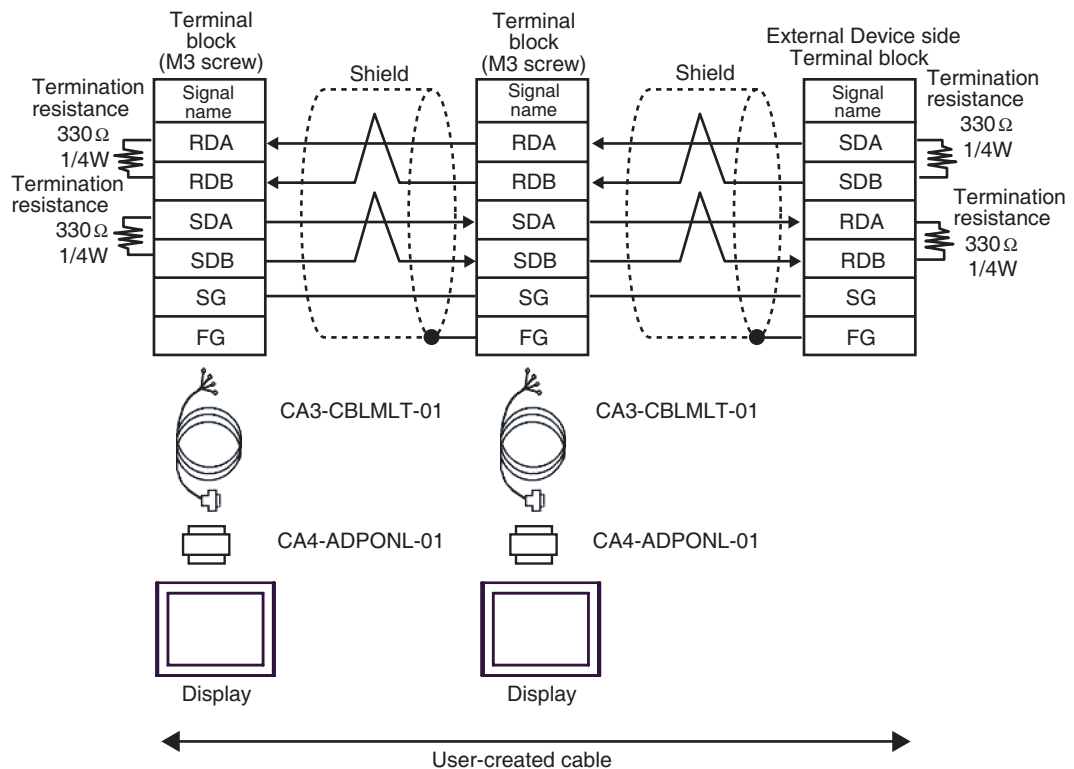

6F)

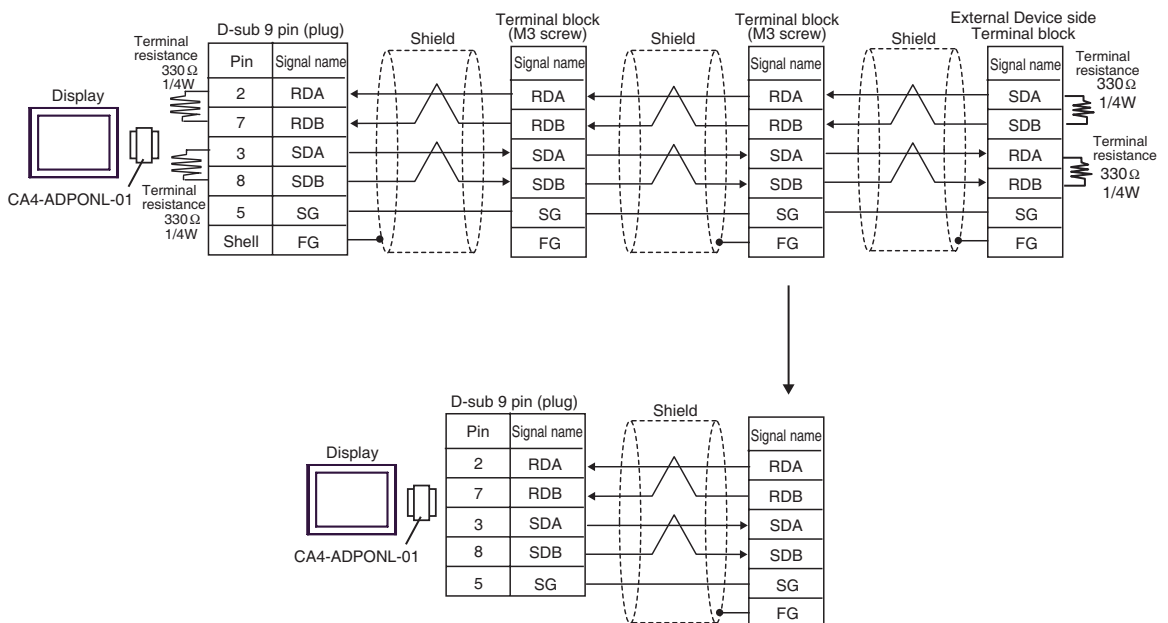

6G)

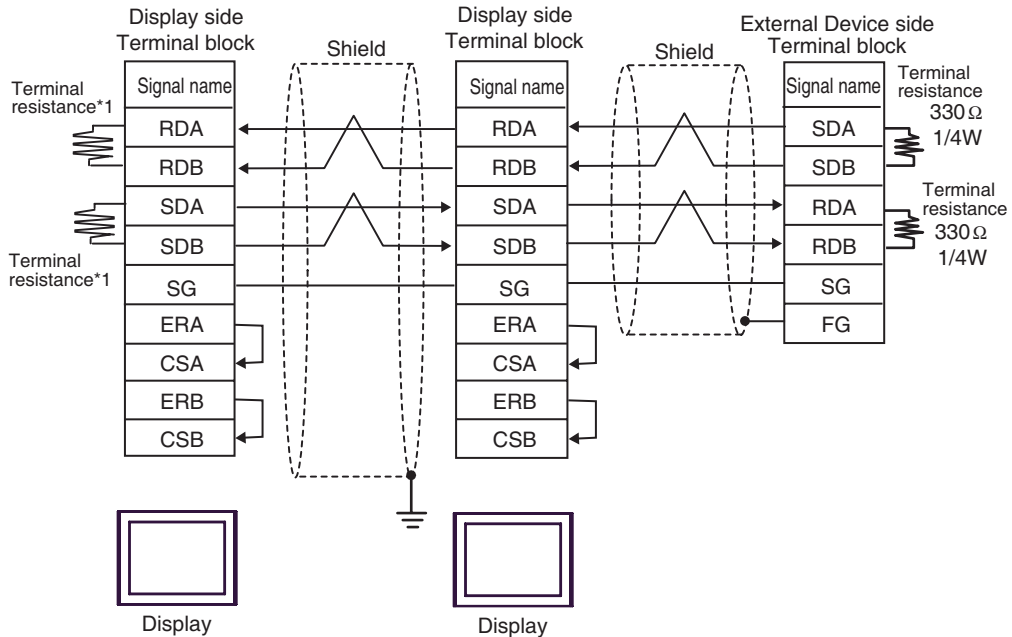

*1 The resistance in the Display is used as the termination resistance. Set the value of the DIP Switch on the rear of the Display as shown in the table below.


DIP Switch No.	Set Value
1	ON
2	OFF
3	ON
4	OFF



















For the Displays other than that used as the terminal, set the DIP Switch 1-4 on the rear of the Display to OFF in the n:1 connection.

6 Range of Supported Device Address

Range of supported device address is shown in the table below. Please note that the actually supported range of the devices varies depending on the External Device to be used. Please check the actual range in the manual of your External Device.

■ MELSEC Q (High performance model, Basic model) / MELSEC QnA Series

 This address can be specified as system data area.

Device	Bit Address	Word Address	32bits	Notes
Input Relay	X0000-X1FFF	X0000-X1FF0		 0
Output Relay	Y0000-Y1FFF	Y0000-Y1FF0		 0
Internal Relay	M00000-M32767	M00000-M32752		 16
Special Relay	SM0000-SM2047	SM0000-SM2032		 16
Latch Relay	L00000-L32767	L00000-L32752		 16
Annunciator	F00000-F32767	F00000-F32752		 16
Edge Relay	V00000-V32767	V00000-V32752		 16
Step Relay	S0000-S8191	S0000-S8176		 16
Link Relay	B0000-B7FFF	B0000-B7FF0		 0
Special Link Relay	SB000 - SB7FF	SB000 - SB7F0		 0
Timer (Contact)	TS00000-TS23087	-		
Timer (Coil)	TC00000-TC23087	-		
Retentive Timer (Contact)	SS00000-SS23087	-		
Retentive Timer (Coil)	SC00000-SC23087	-		
Counter (Contact)	CS00000-CS23087	-		
Counter (Coil)	CC00000-CC23087	-		
Timer (Current Value)	-	TN00000-TN23087		
Retentive Timer (Current Value)	-	SN00000-SN23087		
Counter (Current Value)	-	CN00000-CN23087		
Data Register	-	 D00000-D25983		 F
Special Register	-	SD0000-SD2047		 F
Link Register	-	W0000-W657F		 F
Special Link Register	-	SW000-SW7FF		 F
File Register (Normal)	-	R00000-R32767		 F ^{*1}
File Register (Block switching is not necessary)	-	ZR00000000-ZR1042431		 F ^{*1}

Device	Bit Address	Word Address	32bits	Notes
File Register (0R - 31R) ^{*2}	-	0R0000-0R32767	[L / H]	[Bit F] ^{*1}
	-	1R0000-1R32767		
	-	2R0000-2R32767		
	:	:		
	-	30R0000-30R32767		
	-	31R0000-31R26623		


*1 It is different by the memory card which uses the range of file register.












*2 Set the block No. on the head of device name. This is the device name for conversion with GP-Pro/PB III for Windows. When you newly specify the device, we recommend that you should use the file register (Block switching is not necessary).

NOTE








- Please refer to the GP-Pro EX Reference Manual for system data area.
Cf. GP-Pro EX Reference Manual "Appendix 1.4 LS Area (Direct Access Method)"
- Please refer to the precautions on manual notation for icons in the table.
☞ "Manual Symbols and Terminology"

■ MELSEC Q (Universal model) Series

 This address can be specified as system data area.

Device	First 5 digits of the serial No. in the CPU unit: Less than 10042		First 5 digits of the serial No. in the CPU unit: 10042 or later		32bits	Notes
	Bit Address	Word Address	Bit Address	Word Address		
Input Relay	X0000-X1FFF	X0000-X1FF0	X0000-X1FFF	X0000-X1FF0		
Output Relay	Y0000-Y1FFF	Y0000-Y1FF0	Y0000-Y1FFF	Y0000-Y1FF0		
Internal Relay	M00000-M32767	M00000-M32752	M00000-M61439	M00000-M61424		
Special Relay	SM0000-SM2047	SM0000-SM2032	SM0000-SM2047	SM0000-SM2032		
Latch Relay	L00000-L32767	L00000-L32752	L00000-L32767	L00000-L32752		
Annunciator	F00000-F32767	F00000-F32752	F00000-F32767	F00000-F32752		
Edge Relay	V00000-V32767	V00000-V32752	V00000-V32767	V00000-V32752		
Step Relay	S0000-S8191	S0000-S8176	S0000-S8191	S0000-S8176		
Link Relay	B0000-B7FFF	B0000-B7FF0	B0000-BEFFF	B0000-BEFF0		
Special Link Relay	SB0000 - SB7FFF	SB0000 - SB7FF0	SB0000 - SB7FFF	SB0000 - SB7FF0		
Timer (Contact)	TS00000-TS25023	-	TS00000-TS25471	-		
Timer (Coil)	TC00000-TC25023	-	TC00000-TC25471	-		
Retentive Timer (Contact)	SS00000-SS25023	-	SS00000-SS25471	-		
Retentive Timer (Coil)	SC00000-SC25023	-	SC00000-SC25471	-		
Counter (Contact)	CS00000-CS25023	-	CS00000-CS25471	-		
Counter (Coil)	CC00000-CC25023	-	CC00000-CC25471	-		
Timer (Current Value)	-	TN00000-TN25023	-	TN00000-TN25471		

continued to next page

Device	First 5 digits of the serial No. in the CPU unit: Less than 10042		First 5 digits of the serial No. in the CPU unit: 10042 or later		32bits	Notes
	Bit Address	Word Address	Bit Address	Word Address		
Retentive Timer (Current Value)	-	SN00000-SN25023	-	SN00000-SN25471	L/H	
Counter (Current Value)	-	CN00000-CN25023	-	CN00000-CN25471		
Data Register	-	D00000-D28159	-	D0000000-D0065535		
Special Register	-	SD0000-SD2047	-	SD0000-SD2047		
Link Register	-	W0000-W6DEF	-	W000000-W00FFFF		
Special Link Register	-	SW0000-SW6DFF	-	SW0000-SW6FFF		
File Register (Normal)	-	R00000-R32767	-	R00000-R32767		 *1
File Register (Block switching is not necessary)	-	ZR0000000-ZR4184063	-	ZR0000000-ZR4184063		 *1
File Register (0R - 31R) *2	-	0R0000-0R32767	-	0R0000-0R32767		 *1
	-	1R0000-1R32767	-	1R0000-1R32767		
	-	2R0000-2R32767	-	2R0000-2R32767		
	:	:	:	:		
	-	30R0000-30R32767	-	30R0000-30R32767		
	-	31R0000-31R26623	-	31R0000-31R26623		

*1 It is different by the memory card which uses the range of file register.

*2 Set the block No. on the head of device name. This is the device name for conversion with GP-Pro/PB III for Windows. When you newly specify the device, we recommend that you should use the file register (Block switching is not necessary).

NOTE

- Please refer to the GP-Pro EX Reference Manual for system data area.
Cf. GP-Pro EX Reference Manual "Appendix 1.4 LS Area (Direct Access Method)"
- Please refer to the precautions on manual notation for icons in the table.

 "Manual Symbols and Terminology"

7 Device Code and Address Code

Use device code and address code when you select "Device Type & Address" for the address type in data displays.

Device	Device Name	Device Code (HEX)	Address Code
Input Relay	X	0080	Value of word address divided by 0x10
Output Relay	Y	0081	Value of word address divided by 0x10
Internal Relay	M	0082	Value of word address divided by 16
Special Relay	SM	0083	Value of word address divided by 16
Latch Relay	L	0084	Value of word address divided by 16
Annunciator	F	0085	Value of word address divided by 16
Edge Relay	V	0086	Value of word address divided by 16
Step Relay	S	0087	Value of word address divided by 16
Link Relay	B	0088	Value of word address divided by 0x10
Special Link Relay	SB	0089	Value of word address divided by 0x10
Timer (Current Value)	TN	0060	Word Address
Retentive Timer (Current Value)	SN	0062	Word Address
Counter (Current Value)	CN	0061	Word Address
Data Register	D	0000	Word Address
Special Register	SD	0001	Word Address
Link Register	W	0002	Word Address
Special Link Register	SW	0003	Word Address
File Register (Normal)	R	000F	Word Address
File Register (Block switching is not necessary)	ZR	000E	Word Address
File Register (0R - 31R)	0R	0010	Word Address
	1R	0011	Word Address
	2R	0012	Word Address
	:	:	:
	30R	002E	Word Address
	31R	002F	Word Address

8 Error Messages

Error messages are displayed on the Display screen as follows: "No.: Device Name: Error Message (Error Occurrence Area)". Each description is shown below.

Item	Description
No.	Error No.
Device Name	Name of the External Device where error occurs. Device name is a title of the External Device set with GP-Pro EX. (Initial value [PLC1])
Error Message	Displays messages related to the error which occurs.
Error Occurrence Area	<p>Displays IP address or device address of the External Device where error occurs, or error codes received from the External Device.</p> <div style="border: 1px solid black; padding: 2px; margin: 5px 0;">NOTE</div> <ul style="list-style-type: none"> • IP address is displayed such as "IP address(Decimal): MAC address(Hex)". • Device address is displayed such as "Address: Device address". • Received error codes are displayed such as "Decimal[Hex]".

Display Examples of Error Messages

"RHAA035: PLC1: Error has been responded for device write command (Error Code: 2 [02H])"

NOTE

- Refer to your External Device manual for details on received error codes.
 - Refer to "When an error is displayed (Error Code List)" in "Maintenance/Troubleshooting Manual" for details on the error messages common to the driver.
-

